

TAIL BELT GUIDE [H0946-S]

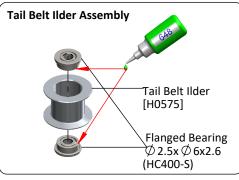


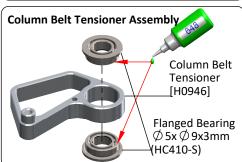


CODE	NAME	QUANTITY
H0575	Tail Belt Ilder	1
H0946	Column Belt Tensioner	1
H0947	Ilder Support	1
HC022	Socket Head Cap Screws M2.5x10mm	1
HC180	Washer \emptyset 3.2x \emptyset 6x0.5mm	1
HC400	Flanged Bearing Ø 2.5x Ø 6x2.6mm	2
HC410	Flanged Bearing \emptyset 5 \emptyset 9x3mm	2
HC450	Shims ∅ 5x ∅ 7x0.1mm	1
HC516	Spring	1
HC517	Socket Head Cap Screws M2.5x25mm	1





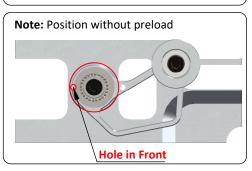

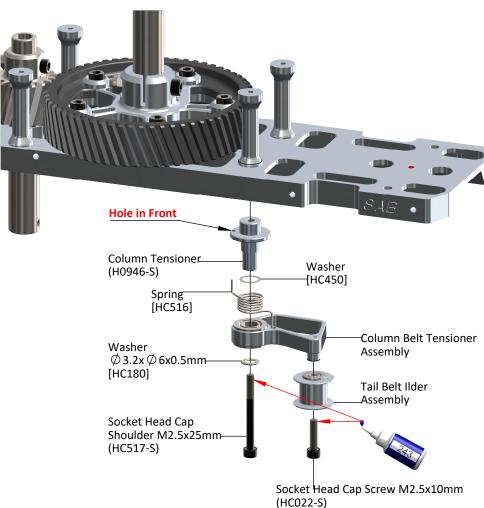

Move the tail case and tighten the belt until the tensioner is in this position.

