


The swashplate leveler allows you to locate the center position for the swashplate and to verify that it is horizontal. It is used in the calibration step and thanks to its design, it allows you to quickly check your setup without removing the head.

**Note:**

Place under the Screws.

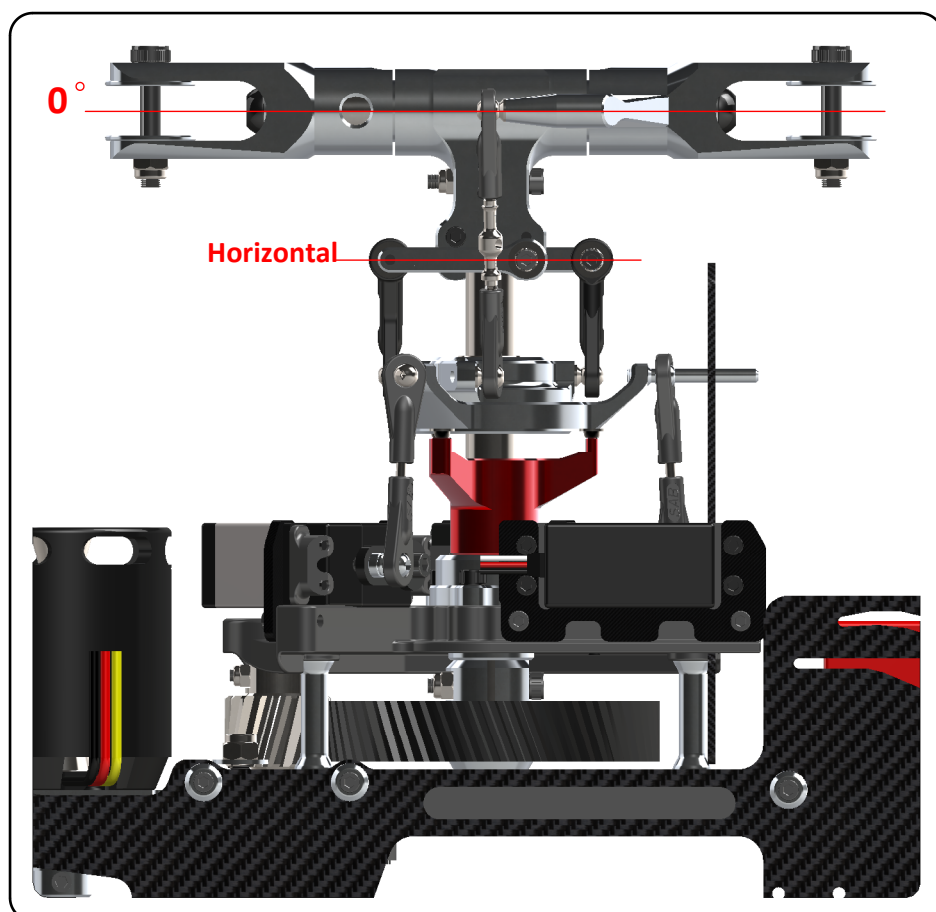