



Battery Support Assembly



Flat Head Cap
Screw M2.5x8mm
(x 5 x 25)

- Battery Block Assembly



DETAIL A

Finishing
Washer M3
(H0007-S)

Socket Head Cap
Screw M3x6mm
(HC044-S)

Finishing
Washer M3
(H0007-S)

Finishing
Washer M3
(H0007-S)

Socket Head Cap
Screw M3x6mm
(HC044-S)

Finishing
Washer M3
(H0007-S)

Socket Head Cap
Screw M3x12mm
(HC062-S)

We recommend de-burring the edges in this areas.
The best solution is to use some Rubber Edge Protection HA114.
In this case glue it with CA.

NOTE: In Bag 5 you can find the ESC installation screws.

QUICK BATTERY RELEASE

[H0865-S]



Bag 4

Battery plate
(H0866-S)

Assembly of the Battery


Before permanently mounting the batteries onto the battery tray, check the ideal position for the best center of gravity. Use the double tape HA035 to keep the batteries in position on the tray. Use the Reinforced Strapping Tape [HA042-S]. It is recommended to wrap 2-3 times in each of the 4 zones. Please check pictures here.

Battery Tray
(H0846-S)

Reinforced Strapping Tape
(HA042-S)



Double Side Tap

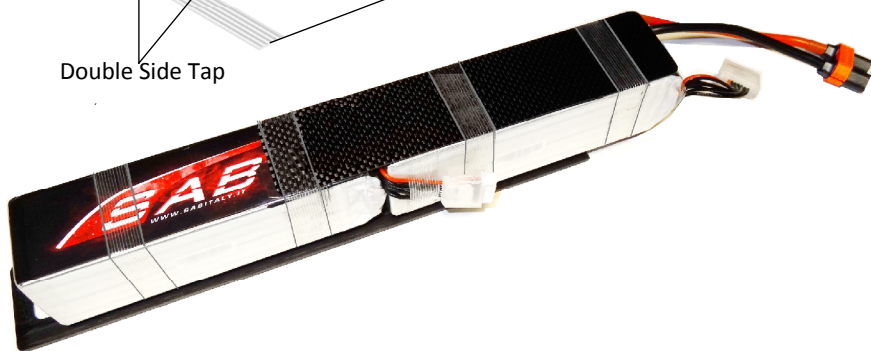


In according with the battery dimension, it is possible to use also Velcro Strap HA041 instead of the Reinforced Strapping Tape.




IMPORTANT

Before flying, make sure that the locking pin is back in its rest position, blocking the battery tray in the correct position

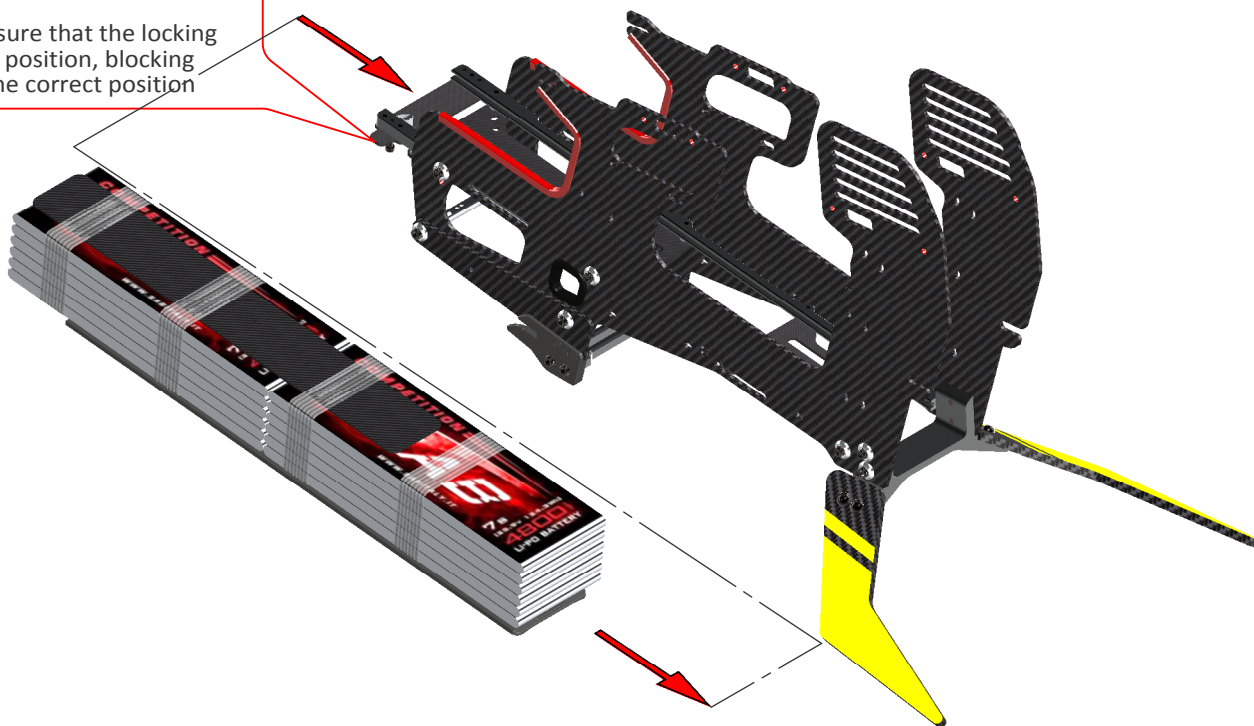


SPARE PARTS

[H0846-S]

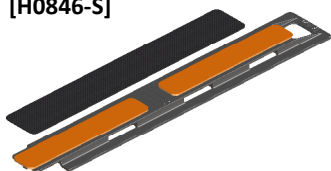


[H0847-S]

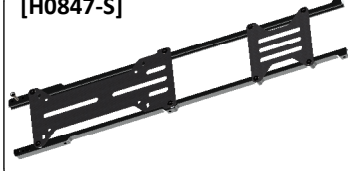

[HA041-S]



[HA042-S]

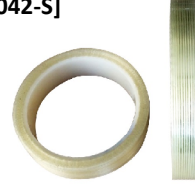

SAB HELI DIVISION