

# MANUAL GOBLIN URUKAY COMPETITION



- Carefully check your model before each flight to ensure it is airworthy.
- Consider flying only in areas dedicated to the use of model helicopters.
- Check and inspect the flying area to ensure it is clear of people orbstacles.
- Rotor blades can rotate at very high speeds! Be aware of the danger they pose.
- Always keep the model at a safe distance from other pilots and spectators.
- Avoid maneuvers with trajectories towards a crowd.
- Always maintain a safe distance from the model.



## **Goblin URUKAY COMPETITION Manual**

Release 1.2 - December 2015

## WORLD DISTRIBUTION

www.goblin-helicopter.com

For sales inquiries, please email: <a href="mailto:sales@goblin-helicopter.com">sales@goblin-helicopter.com</a>
For info inquiries, please email: <a href="mailto:support@goblin-helicopter.com">support@goblin-helicopter.com</a>

Attention: If you are a consumer and have questions or need of assistance,

please contact in a first time the Goblin retailer where you made the purchase

## **EUROPEAN DISTRIBUTION**

www.sabitaly.it

For sales inquiries, please email: sales@sabitaly.it For info inquiries, please email: info@sabitaly.it

Attention: If you are a consumer and have questions or need of assistance,

please contact in a first time the Goblin retailer where you made the purchase



## **VERY IMPORTANT**

Inside Box 6, you will find Bag 21. This bag contains your serial number tag. Please take a moment to register your kit online via our web site at:

## http://www.goblin-helicopter.com

It is extremely important that you take a moment to register your helicopter with us. This is the only way to ensure that you are properly informed about changes to your kit, such as upgrades, retrofits and other important developments. SAB Heli Division cannot be held responsible for issues arising with your model and will not provide support unless you register your serial

To mount the serial number tag on your helicopter, please refer to page 29.

Thank you for your purchase, we hope you enjoy your new Goblin helicopter!

**SAB Heli Division** 

#### **INDEX**

1 - Specifications

2 – Important Notes 🗘

3 – Components and Box

4 – Carbon frame Assembly

5 – Trasmission Assembly

6 - Main Rotor HPS3

- Assembling The Modules

 Installation of Swashplate Servos 8

Installation of The Motor

10 - Installation of The ESC

11 – Installation of Flybarless Unit and RX12 – Tail Assembly

13 - Installation of the Boom, Canopy


14 - Battery

15 - In flight 🛝 16 – Maintenance

17 - Exploded Views

18 - Spare Parts

## **SPECIFICATIONS**

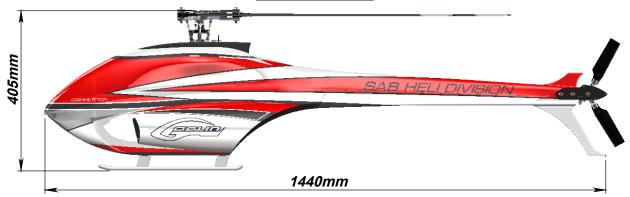



Main rotor diameter:

\* HPS3, 3 Blade main rotor: 1638mm with 725mm blades.

Main blade length: up to 750mm Tail rotor diameter: 304mm Tail blade length: 104mm Main shaft diameter: 12mm Tail shaft diameter: 6mm Spindle diameter: 10mm

Motor size: Maximum 64mm diameter, maximum height 72mm Battery compartment: 60x58x350mm (adaptable to 75x58x350mm)





#### **IMPORTANT NOTES**

- \*This radio controlled helicopter is not a toy.
- \*This radio controlled helicopter can be very dangerous.
- \*This radio controlled helicopter is a technically complex device which has to be built and handled very carefully.
- \*This radio controlled helicopter must be built following these instructions. This manual provides the necessary information to correctly assemble the model. It is necessary to carefully follow all the instructions.
- \*Inexperienced pilots must be monitored by expert pilots.
- \*All operators must wear safety glasses and take appropriate safety precautions.
- \*A radio controlled helicopter must only be used in open spaces without obstacles, and far enough from people to minimize the possibility of accidents or of injury to property or persons.
- \*A radio controlled helicopter can behave in an unexpected manner, causing loss of control of the model, making it very dangerous.
- \*Lack of care with assembly or maintenance can result in an unreliable and dangerous model.
- \*Neither SAB Heli Division nor its agents have any control over the assembly, maintenance and use of this product.

  Therefore, no responsibility can be traced back to the manufacturer. You hereby agree to release SAB Heli Division from any responsibility or liability arising from the use of this product.

#### **SAFETY GUIDELINES**

- \*Fly only in areas dedicated to the use of model helicopters.
- \*Follow all control procedures for the radio frequency system.
- \*It is necessary that you know your radio system well. Check all functions of the transmitter before every flight.
- \*The blades of the model rotate at a very high speed; be aware of the danger they pose and the damage they may cause.
- \*Never fly in the vicinity of other people.


## **NOTES FOR ASSEMBLY**

Please refer to this manual for assembly instructions for this model.

Follow the order of assembly indicated. The instructions are divided into chapters, which are structured in a way that each step is based on the work done in the previous step. Changing the order of assembly may result in additional or unnecessary steps.

Use thread lockers and retaining compounds as indicated. In general, each bolt or screw that engages with a metal part requires thread lock.

It is necessary to pay attention to the symbols listed below:

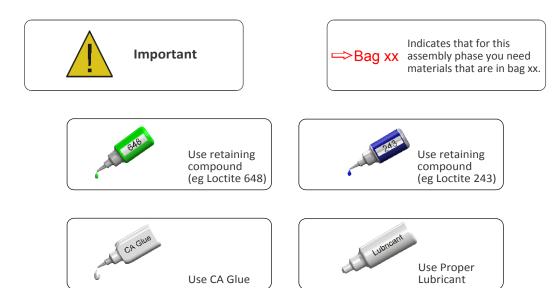



## ADDITIONAL COMPONENTS REQUIRED

\*Electric Motor: 400 - 560Kv Maximum diameter 64mm, Maximum height 72mm, Pinion shaft diameter 6/8mm

\*Speed controller: minimum 120A, suggest 160A

\*Batteries: 12S-5000 mAh

\*1 flybarless 3 axis control unit

\*Radio power system, if not integrated with the ESC

\*3 cyclic servos

\*1 tail rotor servo

\*6 channel radio control system on 2.4 GHz

(See configuration examples on page 17)

## **TOOLS, LUBRICANTS, ADHESIVES**

\*Generic pliers

\*Hexagonal driver, size 1.5,2,2.5,3,4mm

\*4mm T-Wrench

\*5.5mm Socket wrench (for M3 nuts)

\*8mm Hex fork wrench (for M5 nuts)

\*Medium threadlocker (eg. Loctite 243)

\*Strong retaining compound (eg. Loctite 648)


\*Spray lubricant (eg. Try-Flow Oil)

\*Grease (eg. Microlube GL261)

\*Cyanoacrylate adhesive

\*Pitch Gauge (for set-up)

\*Soldering equipment (for motor wiring)

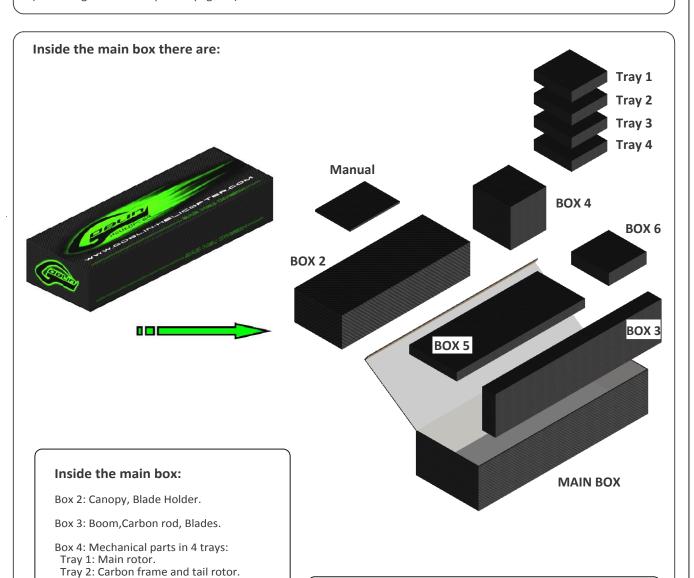

The assembly process is described in the following chapters. Each chapter provides you with the box, bag and/or foam tray numbers you will need for that chapter. The information is printed in a green box in the upper right hand corner of the page at the beginning of every chapter.

SAB HELI DIVISION

Tray 3: Transmission.

Tray 4: Main structure.

Box 5: Bags, Carbon parts.


Box 6: Serial Number, Tail Blades.




## **4-Carbon Frame**




The manufacturing process of the carbon parts often leaves micro-burrs and sharp edges. We recommend de-burring the edges to minimize the risks of electrical wire cuts, etc. Very important in red line zone.

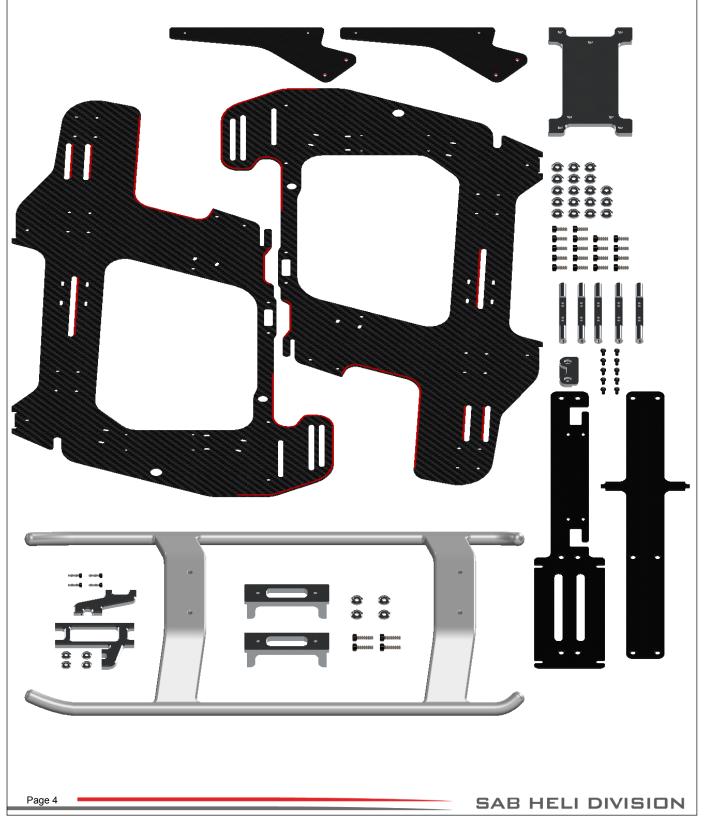




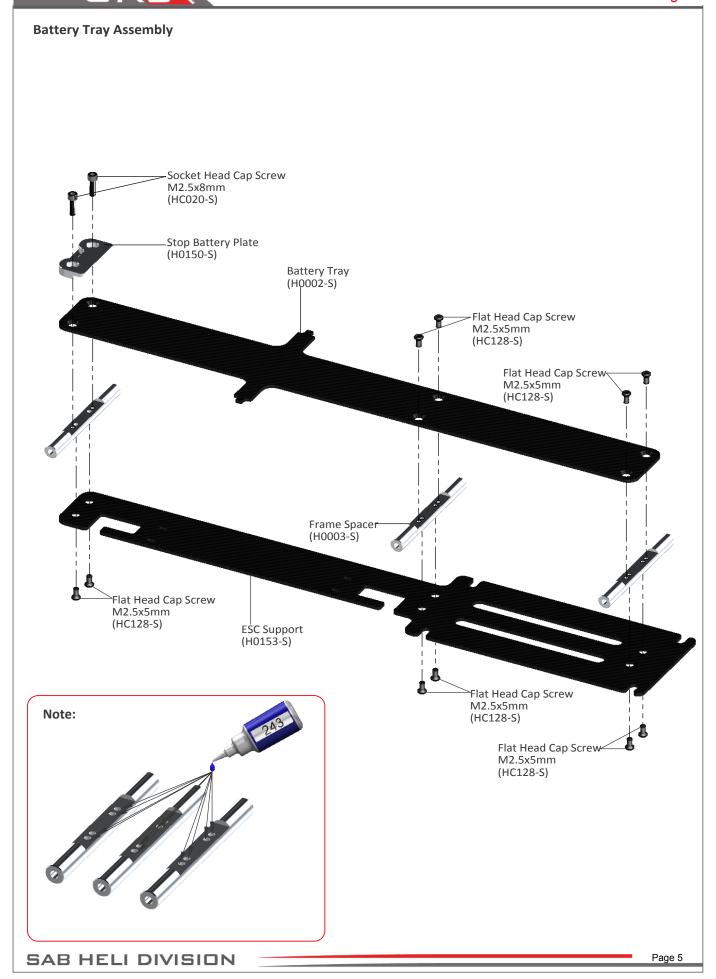




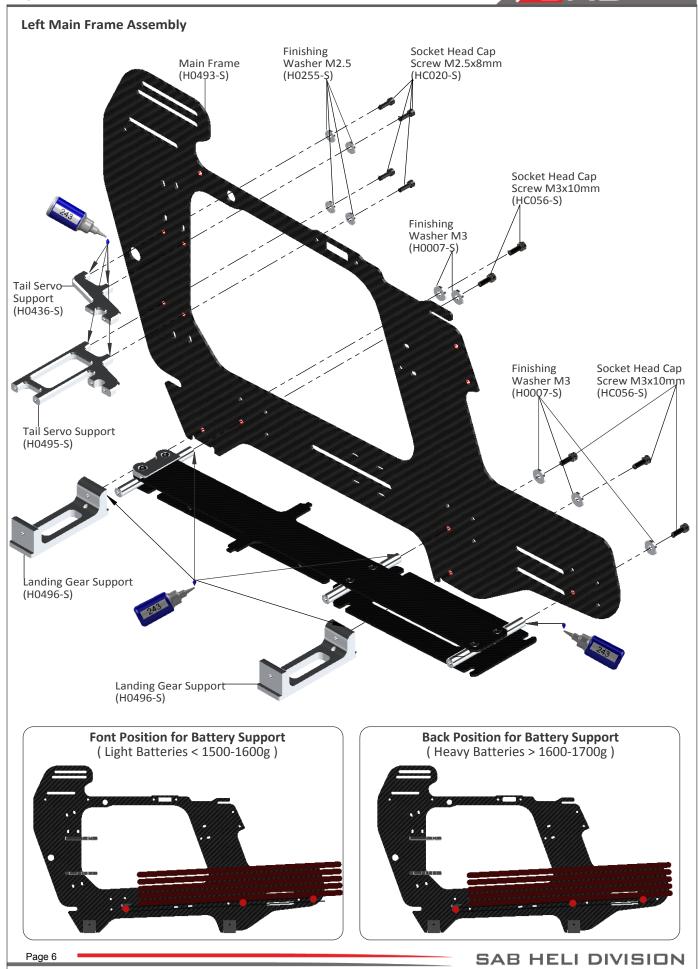


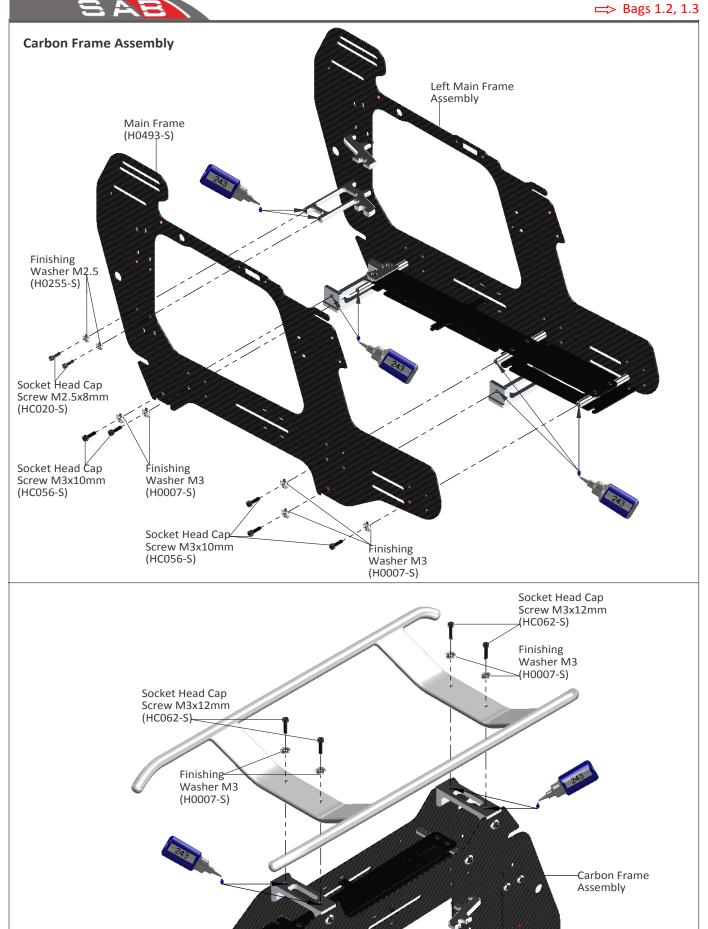




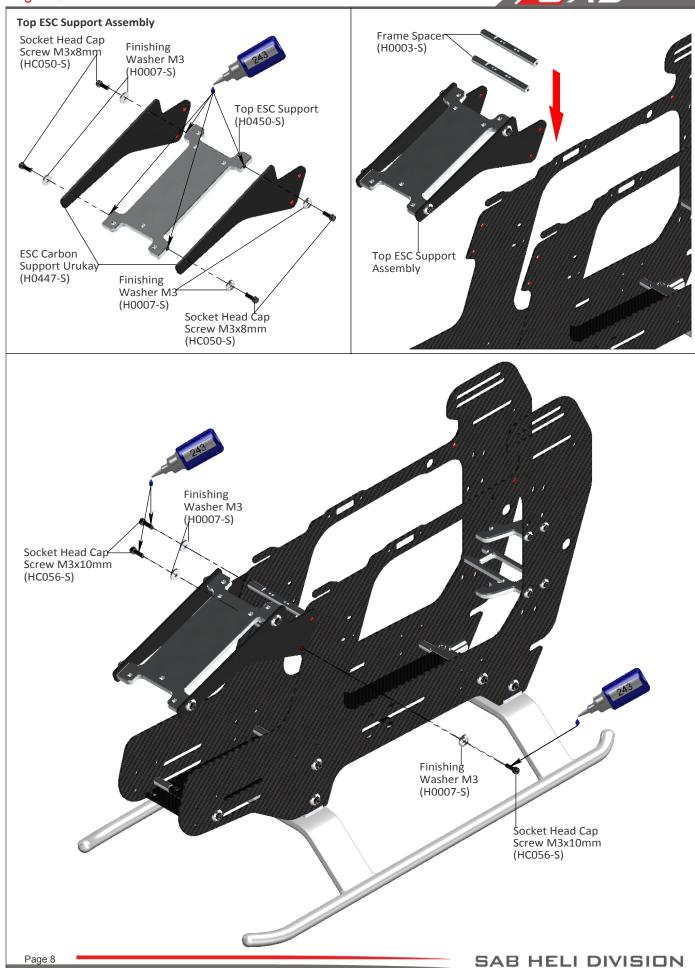



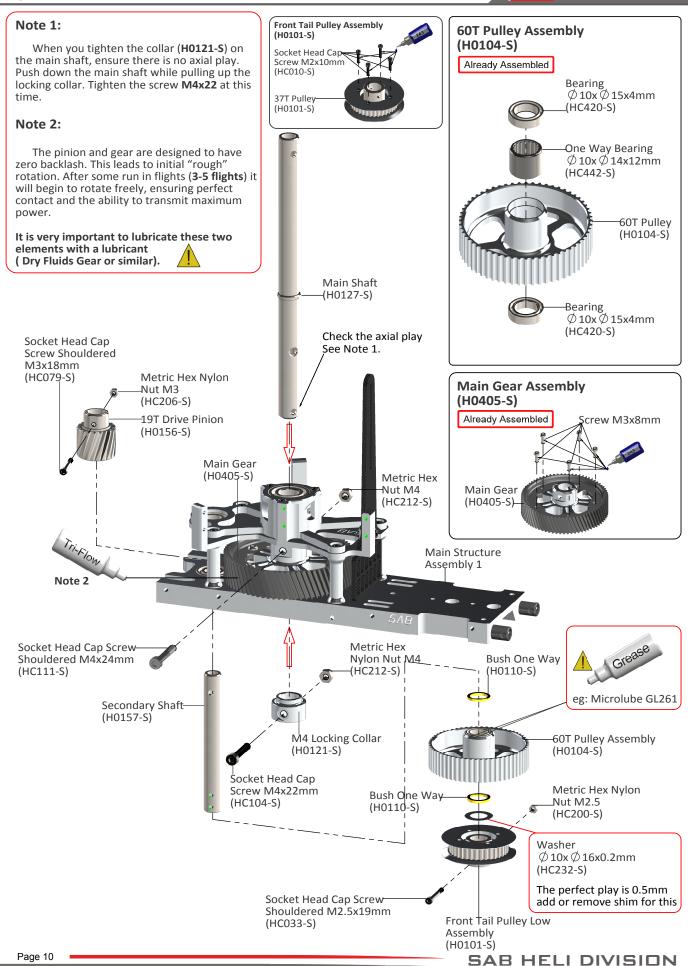



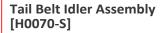



Already Assembled



## Belt Tensioner Arm Assembly [H0070-S]



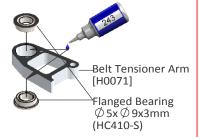

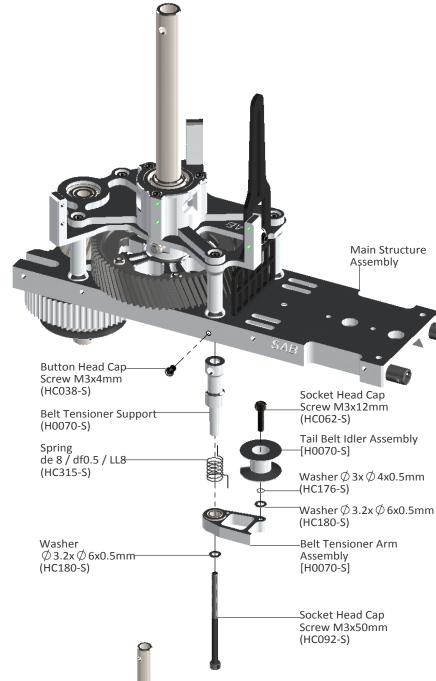



### Note:

Position without preload. Insert the screw in the hole through the aluminum support as in the picture.


SAB HELI DIVISION



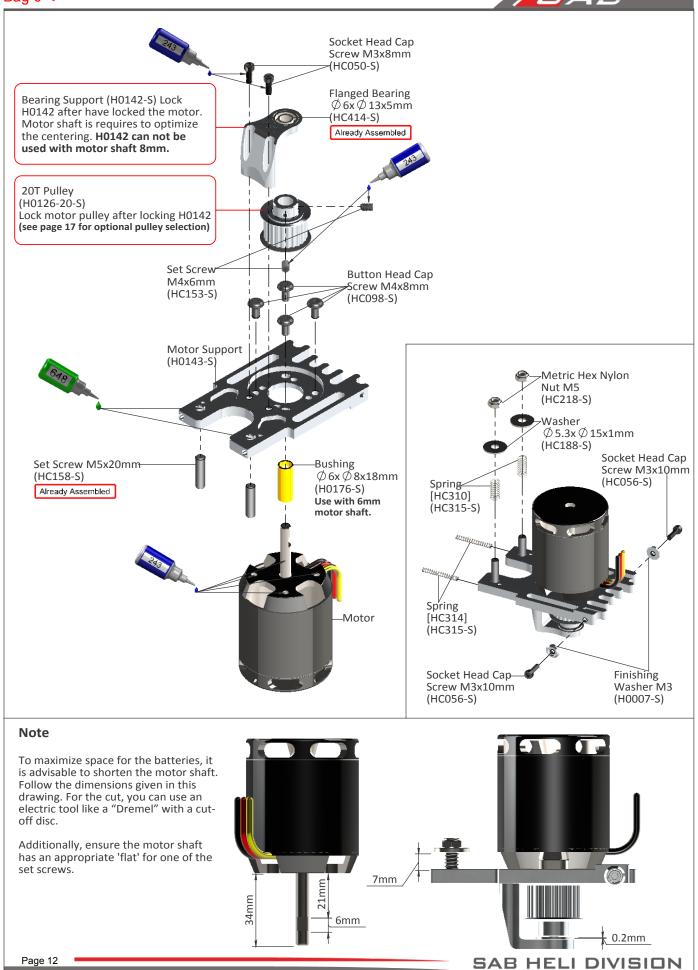

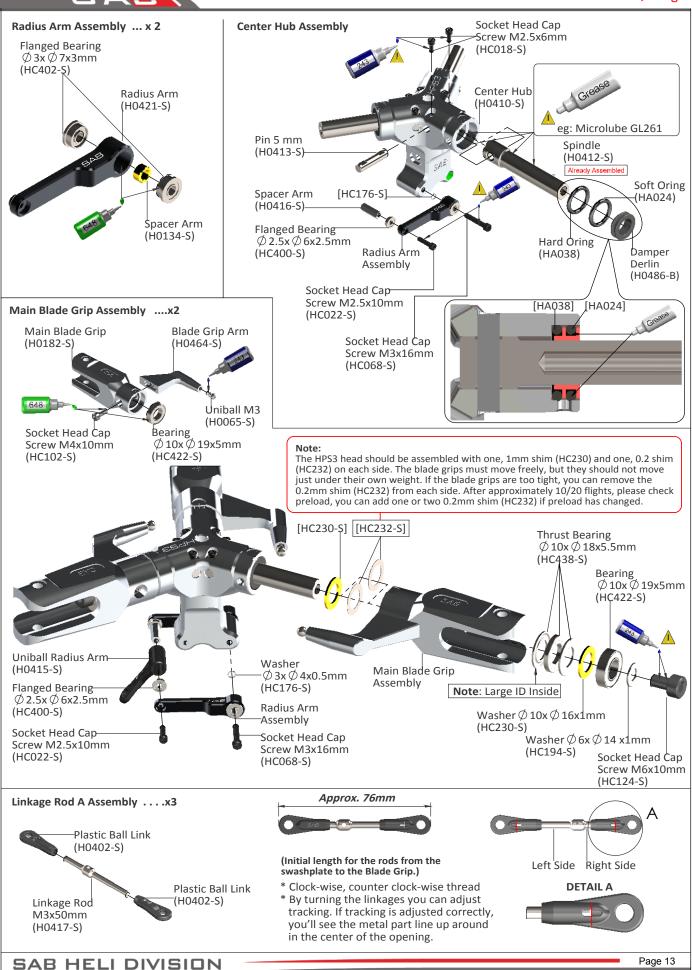


Bag 8 <□

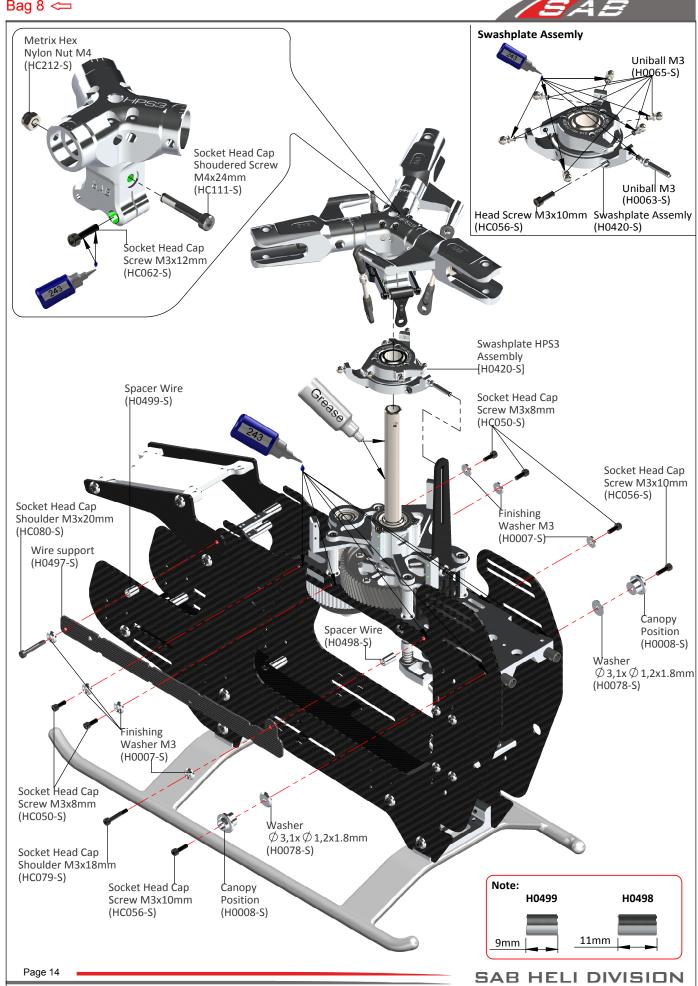




#### **INSTALLATION OF SWASHPLATE SERVOS**

The linkage ball must be positioned between **17-19 mm** out on the servo arm (**figure 1**), recommended servo arm SAB p/n [HA050/HA051]. The 120° placement of the servos inside Goblin means the arms are difficult to access. For this reason it is advisable to ensure alignment of the servo arms (and sub trim set) before installation of the servos in the model (**figure 2**). Proceed with installation following the instructions below. **Figure 3** shows a completed installation.

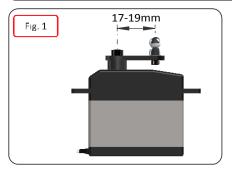




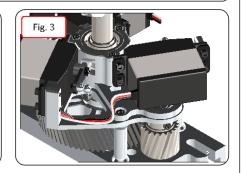

#### ASSEMBLY OF THE BALL ON THE HORN


The rods going from the servos to the swash plate must be as vertical as possible. Not all servos are equal, so to better align them you can choose to use the supplied spacer H0031. Figure 4 illustrates this.

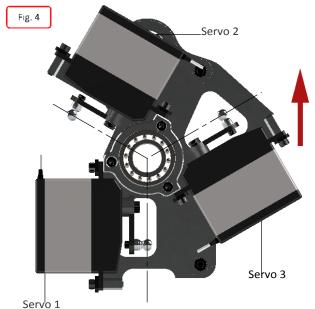


Socket Head Cap Screw M2.5x8mm (HC020-S)


Socket Head Cap


Screw M2.5x12mm (HC026-S)

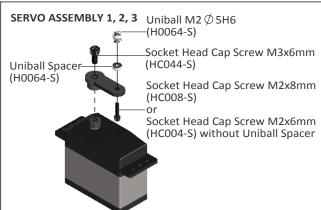


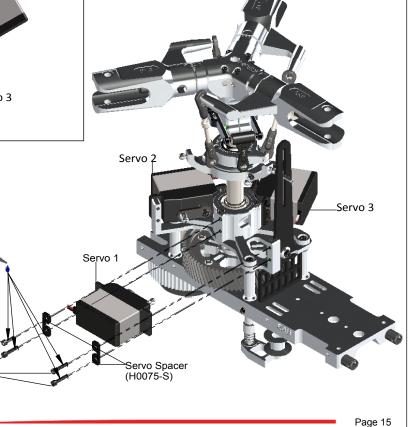



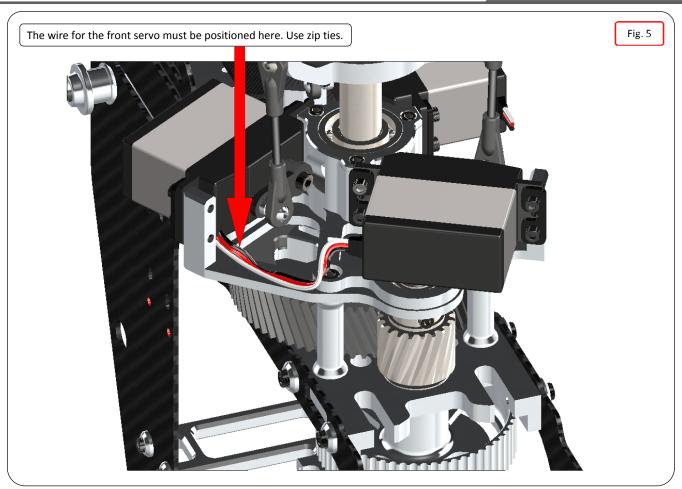

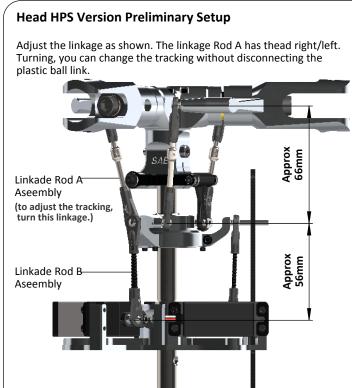

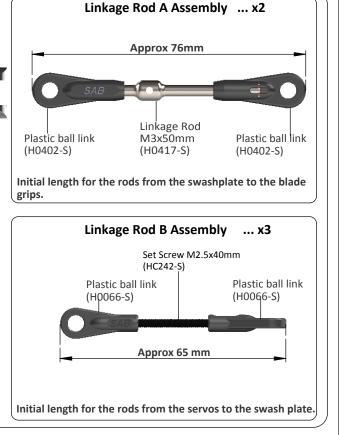

SAB HELI DIVISION



#### TRANSMISSION SETUP

It is important to choose the right reduction ratio to maximize efficiency based on your required flight performance. The Goblin has many possible reduction ratios at your disposal. It is possible to optimize any motor and battery combination. It is recommended to use wiring and connectors appropriate for the currents generated in a helicopter of this class.

If you are using a head speed calculator which requires a main gear and pinion tooth count, use **214** teeth for the main gear (this takes into account the two stage reduction) and the tooth count of your pulley as the pinion count.


#### Below is a list of available reduction ratios:

H0126-18-S - 18T	Pinion = ratio	11.9:1	H0126-22-S - 22T	Pinion = ratio	9.8:1
H0126-19-S - 19T	Pinion = ratio	11.3:1	H0126-23-S - 23T	Pinion = ratio	9.3:1
H0126-20-S - 20T	Pinion = ratio	10.7:1	H0126-24-S - 24T	Pinion = ratio	8.9:1
H0126-21-S - 21T	Pinion = ratio	10.2:1	H0126-25-S - 25T	Pinion = ratio	8.6:1

Some example configurations:

Battery	Motor	ESC	Pinion	RPM Max	Pitch
					REV 01
	GOBLIN URUKAY	COMPETITION (3	Blades )		
	Kontrionik Pyro 800-480	Edge 160 HV	21T		
	KONTRIONIK PYTO 800-480	YGE 160 HV KOSMIK 160/200	20T		
12S	Xnova 4530-500KV	Edge 160 HV	20T	4000	. 42.5
5000/5500 mAh	Quantum 4530 - 500	YGE 160 HV KOSMIK 160/200	19T	1800 rpm	± 12,5
	Scorpion HK-4526-520KV F3C Edition	Edge 160 HV	19T		
	KDE Direct 700XF - 535 - G3	YGE 160 HV KOSMIK 160/200	18T		


Note: For safety reasons we suggest to not exceed 2000 rpm.

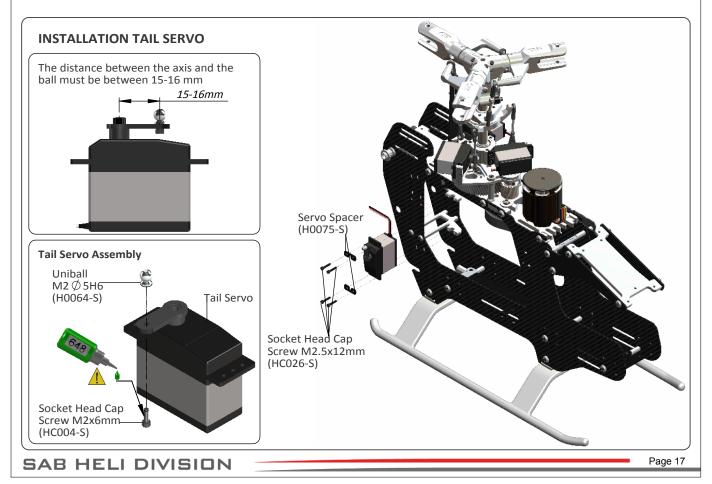




## **MOTOR BELT TENSION**

- \*Assemble the motor and pinion to its mounting plate.
- \*Fit the motor assembly into position.
- \*Compress the springs by pushing the motor toward the main shaft.
- \*At maximum compression, temporarily tighten one of the slide screws.
- \*With the minimum centre distance it is easy to install the belt. First put the belt on the motor pinion.
- \*Then put the belt around the big pulley.
- \*Rotate the motor several times by hand.
- \*Release the screw that locks the slide.
- \*The springs keep the belt in tension.
- \*Help the springs by pulling the motor slightly.
- \*The belt must be very tight.
- \*Lock all screws.

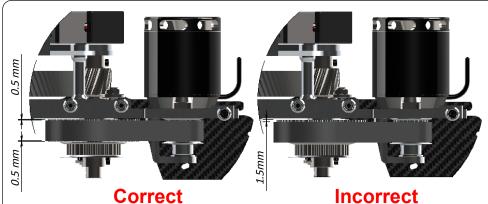

## Note:

Check for vertical alignment of the motor pulley. To do this, simply turn the motor several time and check to you see if the belt is aligned with the big pulley ( one way bearing pulley ). If the belt is riding too high, simply loosen up the motor pulley and drop it just a little bit, if it is riding too low, loosen up the motor pulley and raise it a bit.

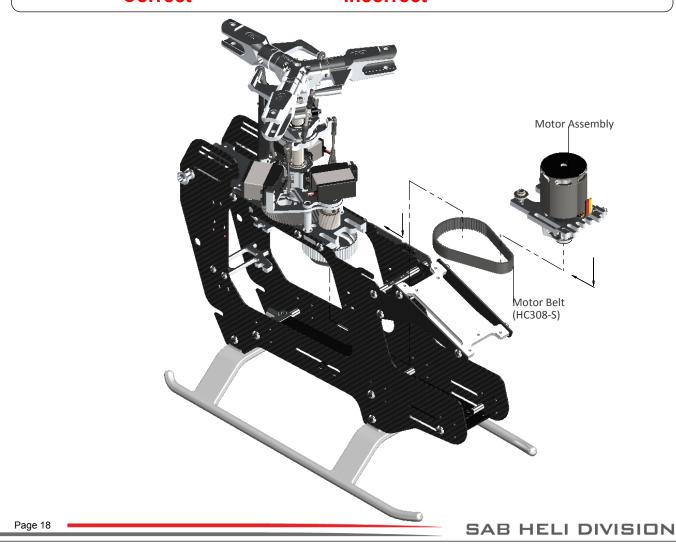



## **DE-BURR THE SIDE FRAMES**


We recommend de-burring the edges of the carbon parts in areas where electrical wires run.



#### **ESC INSTALLATION**

The speed controller (ESC) is installed in the front of the helicopter. Figure 1 shows the mounting area. Figure 2 shows the installation of the Kosmik ESC from Kontronik.



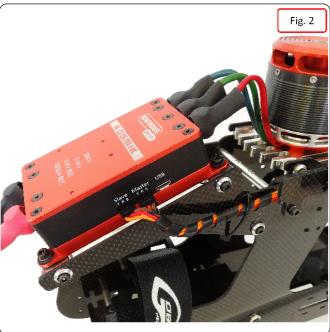

**Figure 3**: Shows the wiring which connects the receiver and ESC.

If the BEC used is combined with the ESC, it is recommended to use a dual wire connection and a unit battery backup.



Use 2 zip-type to lock the Tail servo wire. ( See red arrows ).




Bag 18 <==



#### FLYBARLESS CONTROL UNIT AND RX INSTALLATION

It is possible to install any commercially available Flybarless control unit in the goblin. For Flybarless systems with a separate sensor, the sensor must be installed under the plate (**Figure 1**).


Figure 2 and Figure 3 shows an example of installation of the receiver and flybarless control unit.

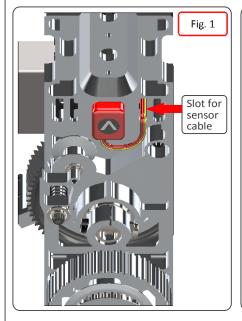






It is important to lock the plugs of the flybarless unit with an adhesive - for example hot glue.

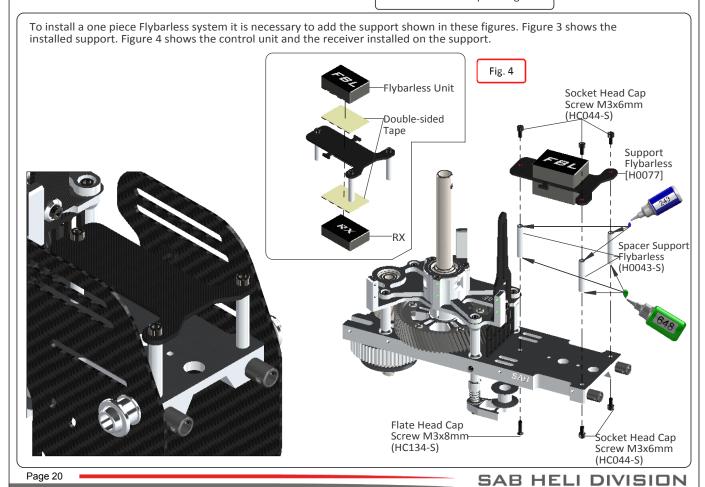





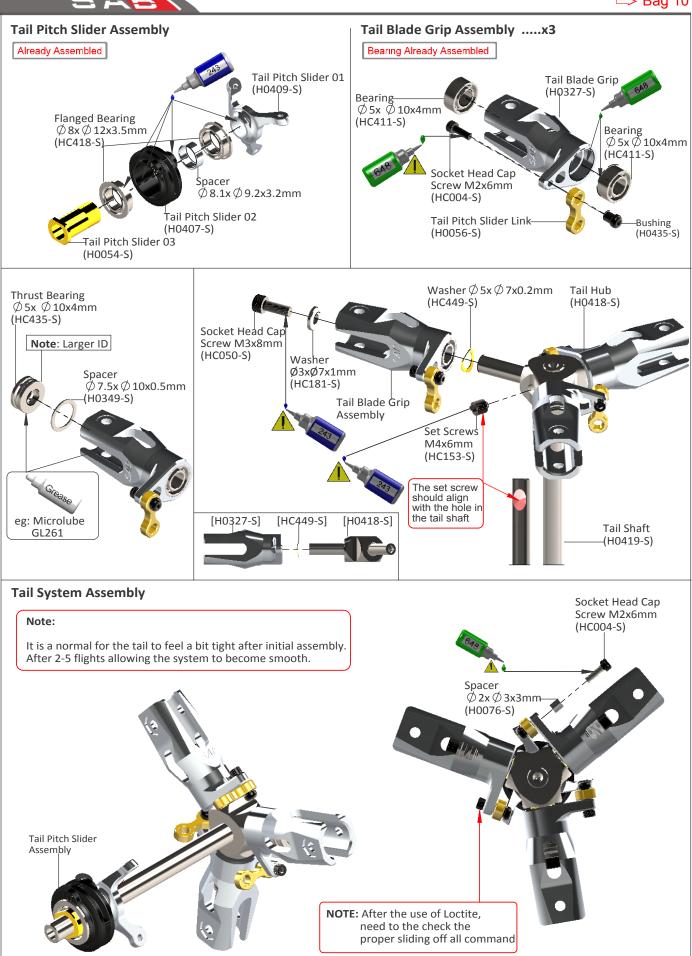




SAB HELI DIVISION

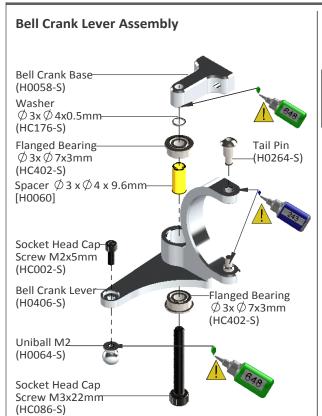


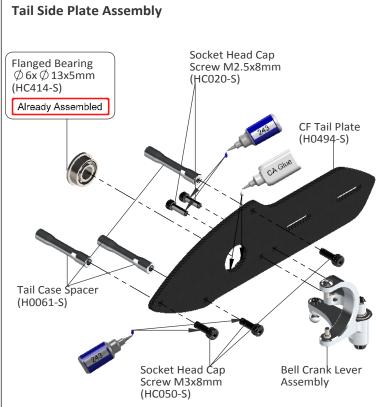



## **Tail System Assembly** Socket Head Cap Flanged Bearing $\emptyset$ 6x $\emptyset$ 13x5mm Screw M3x8mm (HQ050-S) (HC414-S) Belt Gates 2160-3GT-06 (HC325-S) CF Tail Plate (H0494-S) Tail System Assembly Set Screw 25T Pulley M4x6mm (H0155-S) (HC153-S) Note: The set screw should align with the hole in the tail shaft

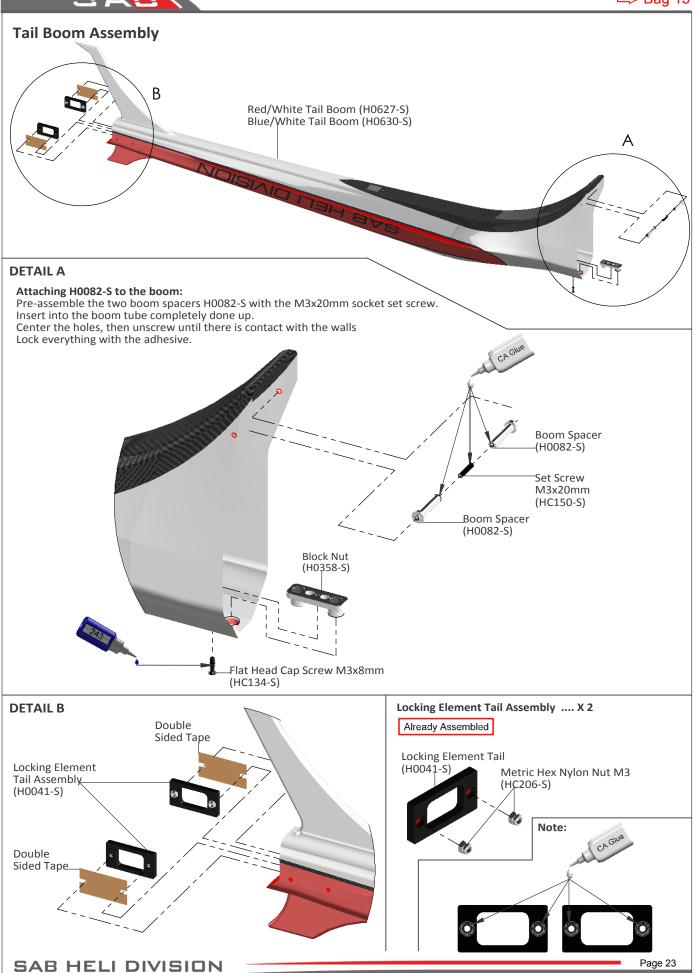



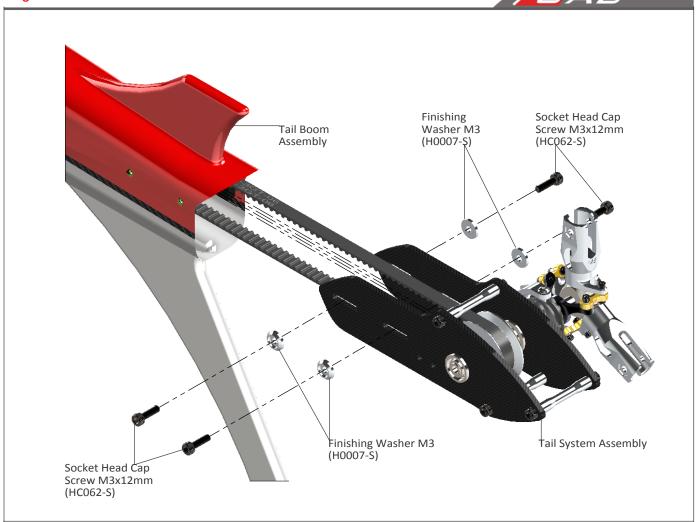

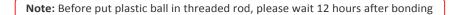


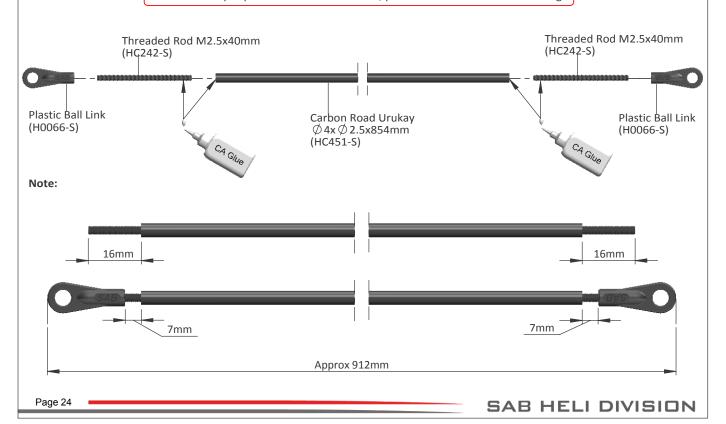




#### Note:

- \* Install H0394 to the boom.
- \* Insert carbon rod through the boom making sure it is inserted through H0394. \* Install H0395 making sure to reduce slop (side play) on the carbon rod.

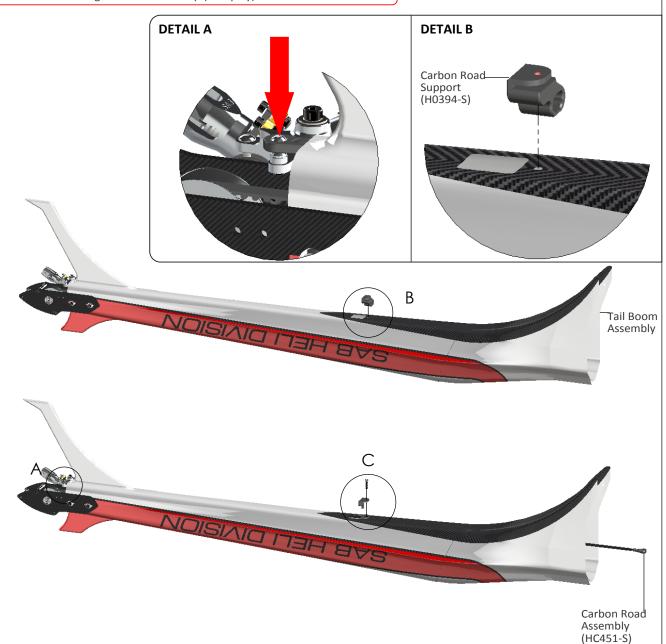

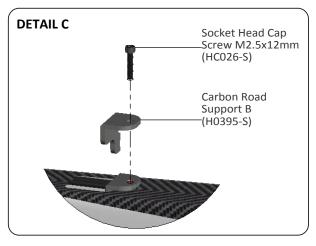


Note: Lubricate this zone Lock H0395, doing attention to the maximum smoothness of the carbon road

Page 25



## **BOOM ASSEMBLY**

- \*Insert the tail boom assembly.
- \*Lock the M8 nuts with the HA016 special tool supplied (Tray 2).
- \*Firmly lock the lateral srews M3x12. Use Loctile for this screw and make sure you remain tight.
- \*Assemble the H0038 carbon security plate .
- \*Connect the Carbon Road.

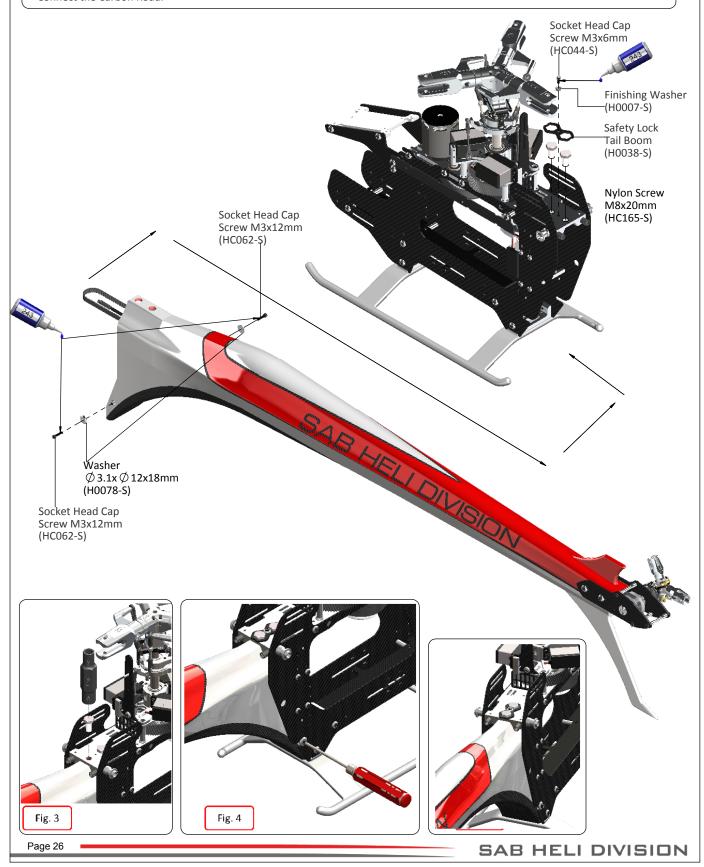




## **TAIL BELT TENSION**

- \*Check the proper assembly of the tail boom.
- \*Check that the aluminum part of the tube is against the M3 stop screw.
- \*Loosen the tail group by loosening the 4 M3 screws.
- \*Install the belt onto the pulley, taking care to respect the direction of rotation (figure 1).
- \*Rotate the tail drive several times by hand.
- \*Load the spring by a rotation of 270° the tensioning arm (clockwise)
- \*Tension the boom until the tensioning arm is aligned with the frame.
- \*Tighten the 4 screws.
- \*Check that the tail output shaft is perpendicular to the tube. (figure 2)
- \*In figure 3,4,5 you can see the three conditions, ok, too loose and too tight.

**NOTE**. To disassemble the tail boom it is possible to remove the pulley H0101-S without loosening the tail unit. Remove the locking screw and pull down.

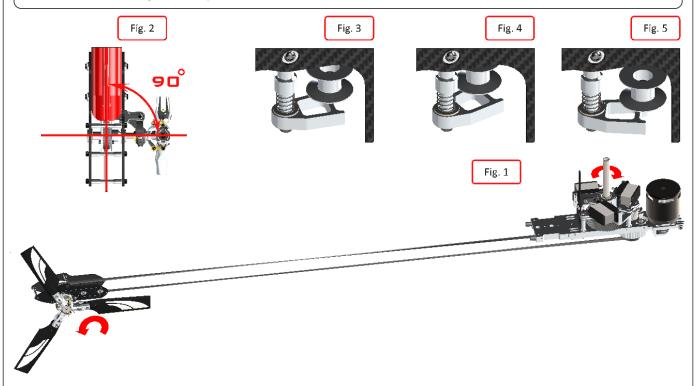

## **CANOPY**

The Goblin Urukay canopy has a very effective locking system in order to eliminate vibrations and optimize aerodynamics.


You must install the following to complete the canopy assembly:

· Canopy grommets (Fig 6), Canopy edge protection Fig 7 and Fig 8.

The canopy hole must be 12 to 12.5 mm in diameter. Initially is 9 mm. You can enlarge the hole slightly to optimize the vertical position of the canopy itself.

To install the canopy:

- Insert the canopy from the front up to the area of the block shown in Fig. 9
- · Join the edges.
- · Insert the H0036 knobs.

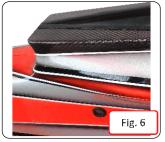







Knoobs

[H0036]

SAB HELI DIVISION

Bag 19 <==



## **BATTERIES**

The battery tray system in the Goblin URUKAY is simple, but very effective. The battery should be attached to the tray (Part **H0149**) with heat shrink, tape or velcro.


You can optionally use the battery protection tray (Part **H0151**) see **Fig. 1, 2**.

Before permanently mounting the batteries onto the battery tray, check the ideal position for the best center of gravity.

Cut the heat shrink around the carbon fiber tray locking pins. Fig. 3.

## **Battery Pack:**

Slide the tray until it locks into the CNC stopper. Fig. 4, 5. Using the velcro straps, making sure that the two locking pins are stopped against the frame spacer (P/n #H0003 and #H0151) Fig.6, 7.

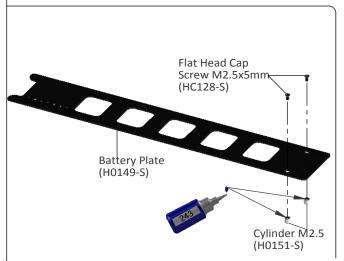





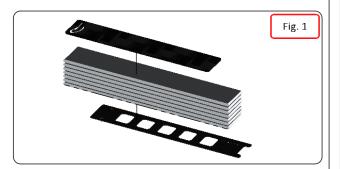


Fig. 2

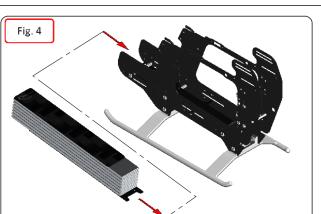


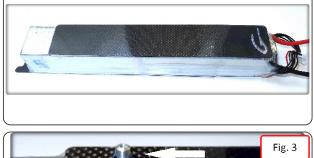

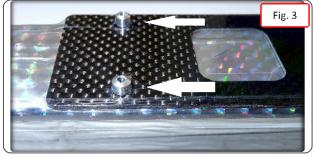

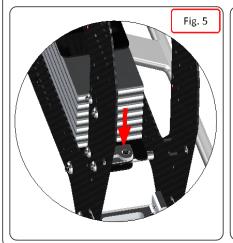



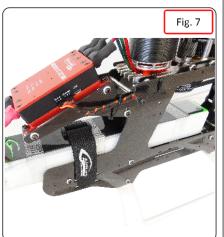

Page 28



#### **SERIAL NUMBER**

In Bag 21, i will find the serial number tag for your Helicopter

4


Sticking the tag as show. Please remember to register your product. (See page 1)




#### **OPERATIONS BEFORE FLIGHT**

- \*Set up the remote control and the flybarless system with utmost care.
- \*It is advisable to test the correct settings of the remote and flybarless system without main blades and tail blades fitted.
- \*Check that all wiring is isolated from the carbon/aluminum parts. It is good practice to protect them at the points where they are at most risk.
- \*Be sure of the gear ratio, verifying carefully the motor pulley in use. The forces acting on the mechanics increase enormously with increasing of rpm. Although the Goblin can fly at high rpm, for safety reasons we suggest to not exceed 2000 rpm.
- \*Check the correct tension of the tail belt through the belt tensioner.
- \*Fit the main blades and tail blades. (Fig.1 and Fig.2)
- \*Please make sure the main blades are tight on the blade grips, you should be able to violently jerk the head in both directions and the blades should not fold. Failure to tighten the blades properly can result in a boom strike. To fold the blades for storage, it is advisable to loosen them.
- \*Check the collective and cyclic pitch. For 3D flight, set about +/- 12°.
- \*It is important to check the correct tracking of the main blades.
- \*On the Goblin, in order to correct the tracking, adjust the main link rod as shown in figure 3. This is provided with a right/left thread system that allows continuous fine adjustments of the length of the control rod; for this adjustment it is not necessary to detach the ball link.

\*Perform the first flight at a low headspeed, 1500/1600 RPM.
After this first flight, do a general check of the helicopter. Verify that all screws are correctly tightened.

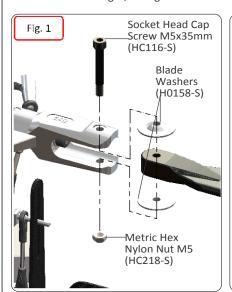

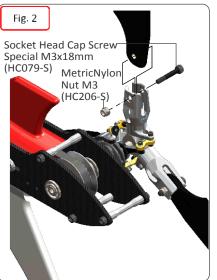



#### **IN FLIGHT**

During its first flights the Goblin has to be "run in".

The Damper, the main gear, the uniball and other parts must undergo some slight wear to operate smoothly. It is likely that during the very first flights the model may exhibit a swaying phenomena, particularly at low head speed. This phenomena disappears after a few flights.

If you want to fly in a generic way, using both low headspeed and high headspeed, the standard setting is the best compromise.

However, if you prefer flying at low speed [< 1600 rpm], for best results we recommend changing the tail pulley for a smaller one to increase tail rotor rpm. In this way, you will have extremely precise tail control even at low RPM. This pulley is available in the upgrade list [H0154-S]





#### **ABOUT HPS3**

The new HPS head offers an independent dampening system for each blade grip, It is possible change the rigidity of the dampening system trought O-ring. In the Kit, you can find 6 O-ring 90° shore (HA038) and 6 O-ring 60° shore (HA024). We suggest to start with medium setup ( 90° inside + 60° ouside, see pag 13 ). You can change 90°/ 90° or 60°/ 60° for change the head caratteristic. Changing the O-ring, please check the Axial preload. The blade grips must move freely, but they should not move just under their own weight.

You can remove / add the 0.2mm shim (HC232) from each side for to get perfect preload.

## **ABOUT HPS3 SETUP**

3 blade rotor heads require a much lower cyclic gain on flybarless systems. We recommend that you set your gain at least 30% lower than the gain you normally use on your 2 blade rotor head helicopters.

You can start increasing the gain after you complete your first flight. Running too high of a gain can induce a violent oscillation that can potentially cause damage to your helicopter in flight.

With 3 blades rotor head, it is very important to have a perfect tracking Often, unusual vibration are determined by wrong tracking.



#### TIPS:

To remove the dampeners, you can use a flathead screwdriver through the hole as shown.



#### **MAINTENANCE**

\*On the Goblin, areas to look for wear include:

- Motor belt
- \* Tail belt
- \* Damper
- Main gear and pinion

The lifespan of these components varies according to the type of flying. On average it is recommended to replace these special parts every **100** flights.


- \*The head tends to lose rigidity after a while. Check this condition every **20** flights. Preloading with precision shim washers, it is possible to vary the rigidity of the head.
- \*Check all uniballs often.
- \*The most stressed bearings are definitely those of the tail shaft. Check them frequently.


All other parts are not particularly subject to wear.

\*Periodically lubricate the tail slide movement and its linkages as well as the swashplate movement and its linkages.

\*Lubricate the main gear with proper Lubricant every 20 flights.


- \*Check the screws that are highlighted in the following images frequently, make sure you remain tight (fig.2 and fig.3).
- \*To ensure safety you should do a general inspection of the helicopter after each flight. You should check:
  - \* The maintenance of proper belt tension.
  - \* The proper isolation of wires from the carbon and aluminum parts.
  - \* That all screws remain tight.

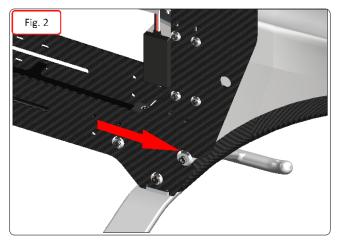

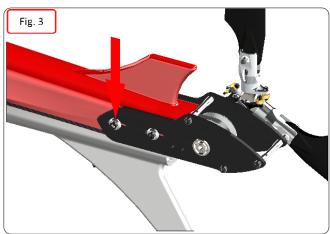

Page 30




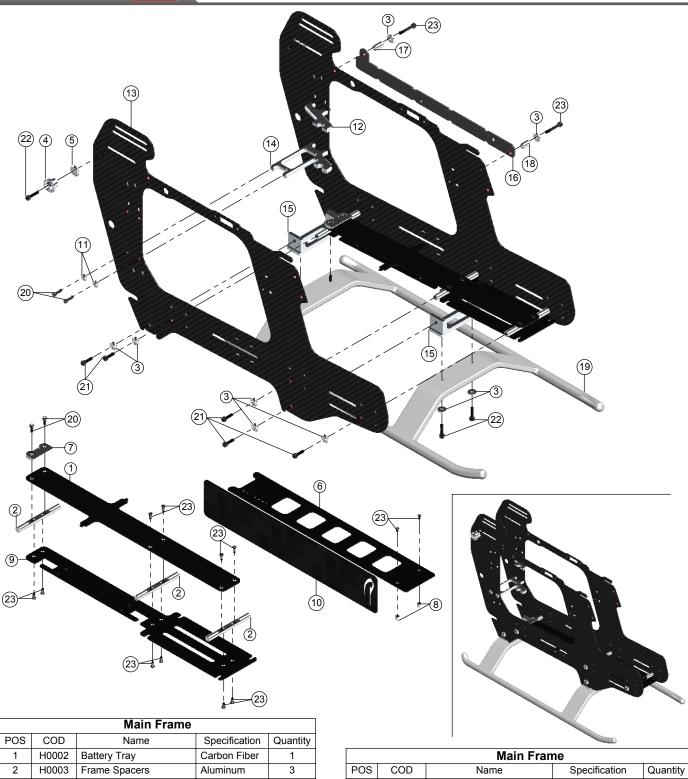

	Main Frame					
POS	COD	Name	Specification	Quantity		
1	H0002	Battery Tray	Carbon Fiber	1		
2	H0003	Frame Spacers	Aluminum	3		
3	H0007	Finishing Washers M3	Aluminum	20		
4	H0008	Canopy Poitioner	Aluminum	2		
5	H0078	Washer Ø 3,1x Ø 1,2x1.8	Aluminum	2		
6	H0149	Battery Plate	Carbon Fiber	1		
7	H0150	Stop Battery Plate	Aluminum	1		
8	H0151	Cylinder M2.5	Aluminum	2		
9	H0153	Battery Support	Carbon Fiber	1		
10	H0153-1	Battery Protection	Carbon Fiber	1		
11	H0255	Finishing Washers M2.5	Aluminum	6		
12	H0436	Tail Servo Support	Aluminum	1		
13	H0493	Main Frames	Carbon Fiber	2		

	Main Frame				
POS	COD	Name	Specification	Quantity	
14	H0495	Tail Servo Support	Aluminum	1	
15	H0496	Landing Gear Support	Aluminum	2	
16	H0497	Wire Supports	Carbon Fiber	1	
17	H0498	Spacer Wire 11mm	Aluminum	1	
18	H0499	Spacer Wire 9mm	Aluminum	1	
19	H0639	Plastic Landing Gear		2	
20	HC020	Socket Head Cap Screws	M2.5 x 8mm	8	
21	HC056	Socket Head Cap Screws	M3 x 10mm	16	
22	HC062	Socket Head Cap Screws	M3 x 12mm	6	
23	HC079	Head Cap Shoulder	M3x18mm	2	
24	HC128	Flat Head Cap Screws	M2.5 x 5mm	12	




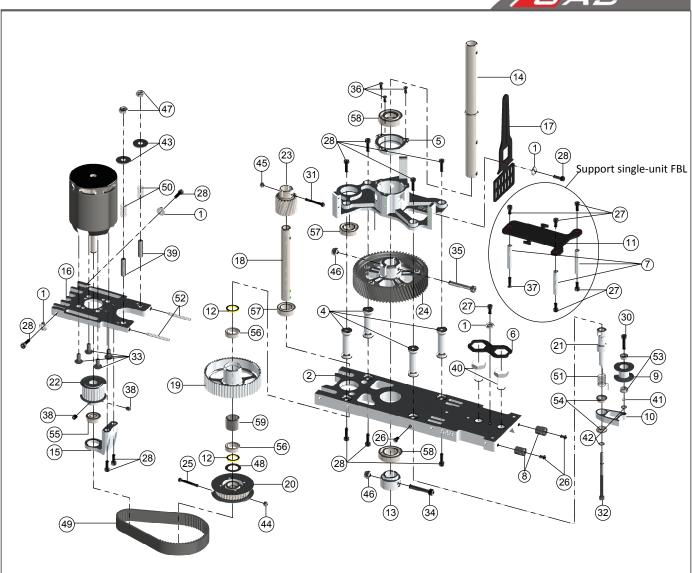

	TRANSMISSION ASSEMBLY				
POS	COD	Name	Specification	Quantity	
1	H0007	Finishing Washers M3	Aluminum	4	
2	H0009	Main Structure	Aluminum	1	
3	H0010	Servo Support	Aluminum	1	
4	H0018	Columns	Aluminum	4	
5	H0024	Main Shaft Bearing Support		1	
6	H0038	Safety Locking Tail Boom	Carbon Fiber	1	
7	H0043	Spacers Flybarless		3	
8	H0050	Antenna Guide	Plastic	2	
9	H0069	Tail Belt Idler		1	
10	H0071	Belt Tensioner Arm		1	
11	H0077	Flybarless Support	Carbon Fiber	1	
12	H0110	Bush-One Ways	Ø10 x Ø13 x 1.4mm	2	
13	H0121	M4 Locking Collar		1	
14	H0127	Main Shaft		1	
15	H0142	Support Bearing	Aluminum	1	
16	H0143	Motor Support	Aluminum	1	
17	H0152	Swash plate Anti-Rotation Guide	Carbon Fiber	1	
18	H0157	Secondary Shaft		1	
19	H0104	One Way Double Bearing	60T	1	
20	H0101	Front Tail Pulley Low	37T	1	
21	H0070	Column Belt Tensioner		1	
22	H0126-20	Motor Pulley 20mm	20T	1	
23	H0156	Drive Pinion	19T M1	1	
24	H0405	Main Gear	68T M1	1	
25	HC033	Socket Head Cap Screw Shouldereds		1	
26	HC038	Button Head Cap Screws	M3 x 4mm	3	
27	HC044	Socket Head Cap Screws	M3 x 6mm	6	
28	HC050	Socket Head Cap Screws	M3 x 8mm	4	
29	HC056	Socket Head Cap Screws	M3 x 10mm	9	
30	HC062	Socket Head Cap Screw	M3 x 12mm	1	


	_	TRANSMISSION ASS		_
POS	COD	Name	Specification	Quantity
31	HC079	Socket Head Cap Screws	M3 x 18mm	1
32	HC092	Socket Head Cap Shoudered	m3 x 50mm	1
33	HC098	Button Head Cap Screws	M4 x 8mm	4
34	HC104	Socket Head Cap Screw	M4 x 22mm	1
35	HC111	Socket Head Cap Screw	M4 x 24mm	1
36	HC128	Flat Head Cap Screws	M2.5 x 5mm	3
37	HC134	Flat Head Cap Screw	M3 x 8mm	1
38	HC153	Set Screws	M4 x 6mm	1
39	HC158	Set Screws	M5 x 20mm	2
40	HC165	Vite Nylon Esa	M8 x 20mm	2
41	HC176	Washer	Ø3 x Ø4x0.5mm	1
42	HC180	Washers	Ø3.2 x Ø6 x 0.5mm	2
43	HC188	Washers	Ø5.3 x Ø 15 x 1mm	2
44	HC200	Metric Hex Nylon Nuts	M2.5 H3.5mm	1
45	HC206	Metric Hex Nylon Nuts	M3 H4mm	1
46	HC212	Metric Hex Nylon Nuts	M4 H5mm	2
47	HC218	Metric Hex Nylon Nuts	M5 H4.8mm	2
48	HC232	Washer	Ø10 x Ø16 x 0.2mm	1
49	HC308	Big Motor Belt	240-3MGT	1
50	HC310	Springs	De 5.8-df0.3-LL9	2
51	HC312	Spring	De 8-df0.5-LL8	1
52	HC315	Springs	De 8-df0.5-LL12	2
53	HC402	Flanged Bearings	Ø3 x Ø7 x 3mm	2
54	HC410	Flanged Bearings	Ø5 x Ø9 x 3mm	2
55	HC414	Flanged Bearings	Ø6 x Ø13 x 5mm	1
56	HC420	Bearings	Ø 10 x Ø 15 x 4mm	2
57	HC422	Bearings	Ø 10 x Ø 19 x 5mm	2
58	HC426	Bearings	Ø12 x Ø24 x 6mm	2
59	HC442	One Way Bearing	Ø10 x Ø14 x 12mm	2



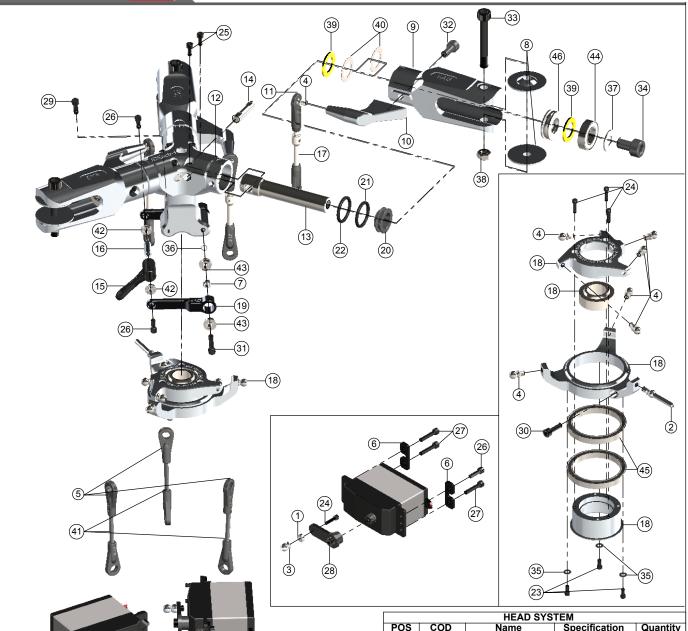

		HEAD SYST	ЕМ	
POS	COD	Name	Specification	Quantity
1	H0031	Uniball Spacers	Aluminum	3
2	H0063	Uniball M3	M3x4 Ø 5H18	1
3	H0064	Uniball M2.5	M2.5 Ø 5H6	3
4	H0065	Uniball M3	M3x4 Ø 5H3	9
5	H0066	Ball Linkages	Plastic	6
6	H0075	Servo Spacers	Carbon Fiber	6
7	H0134	Spacer Arm	Aluminum	2
8	H0158	Blade Washers	Aluminum	6
9	H0182	Main Blade Grip	Aluminum	3
10	H0183	Blade Grip Arm	Aluminum	3
11	H0402	Ball Linkages	Plastic	6
12	H0410	Center Hub	Aluminum	1
13	H0412	Spindle	Steel	3
14	H0413	Pin 5mm	Aluminum	3
15	H0415	Uniball Radius Arm	Plastic	1
16	H0416	Spacer Arm	Aluminum	1
17	H0417	Linkages Rod	Steel	3
18	H0420-S	Swashplate	Set	1

	HEAD SYSTEM				
POS	COD	Name	Specification	Quantity	
19	H0421	Radius Arm	Aluminum	2 3	
20	H0486	Damper Derlin	Pom black		
21	HA024	Oring		3	
22	HA038	Oring		3	
23	HC002	Head Cap Screws	M2x5mm	3	
24	HC008	Head Cap Screws	M2x8mm	6	
25	HC018	Head Cap Screws	M2.5x6mm	6	
26	HC020	Head Cap Screws	M2.5x10mm	5	
27	HC026	Head Cap Screws	M2.5x12mm	9	
28	HC044	Head Cap Screws	M3x6mm	3	
29	HC056	Head Cap Screws	M3x10mm	1	
30	HC062	Head Cap Screws	M3x12mm	1	
31	HC068	Head Cap Screws	M3x16mm	2	
32	HC102	Head Cap Screws	M4x10mm	3	
33	HC116	Head Cap Screws	M5x35mm	3	
34	HC124	Head Cap Screws	M6x10mm	3	
35	HC170	Washer	Ø2x Ø5x0.5	3	
36	HC176	Washer	Ø3x Ø4x0.5	2	
37	HC194	Washer	Ø6xØ14x1	3	
38	HC218	Metrix Nylon Nut	M5	3	
39	HC230	Washer	Ø10xØ16x1	6	
40	HC232	Washer	Ø 10x Ø 16x0.2	3	
41	HC242	Threaded Rods	M2.5x40mm	3	
42	HC400	Flanged Bearing	Ø2.5x Ø6x2.5	2	
43	HC402	Flanged Bearing	Ø3x Ø7x3	4	
44	HC422	Bearing	Ø 10x Ø 19x5	6	
45	HC430	Rad Bearing	Ø30xØ37x4	2	
46	HC438	Thrust Bearing	Ø 10x Ø 18x5.5	3	

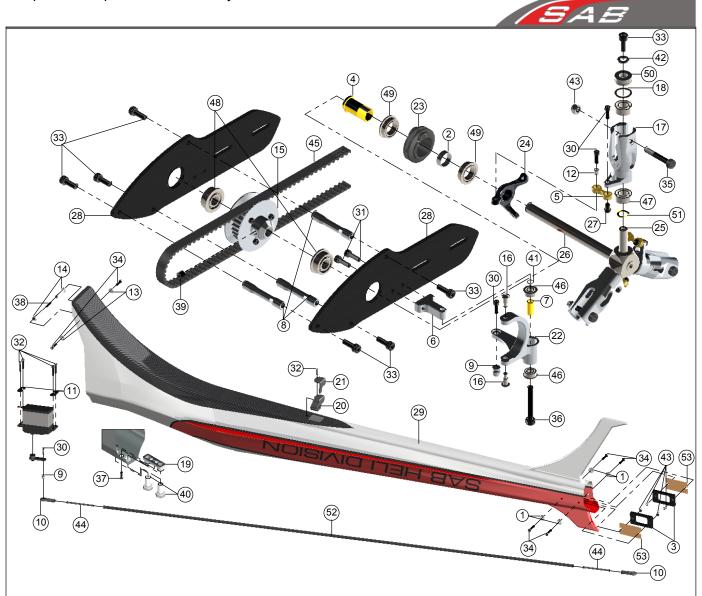

	TAIL SYSTEM					
POS	COD	Name	Specification	Quantity		
1	H0007	Finishing Washer M3	Aluminum	4		
2	H0029	Spacer	Ø8.1 x Ø 9.2 x 3.2mm	1		
3	H0041	Locking Element Tails	Carbon Fiber	2		
4	H0054	Tail Pitch Slider 02	Aluminum	1		
5	H0056	Tail Pitch Slider Link	Aluminum	3		
6	H0058	Bell Crank Base	Aluminum	1		
7	H0060	Spacer	Ø3 x Ø4 x 9.6mm	1		
8	H0061	Tail Case Spacers	Aluminum	3		
9	H0064	Uniballs	M2.5 Ø 5H6	3		
10	H0066	Plastic Ball Links	Plastic	2		
11	H0075	Servo Spacer	Carbon Fiber	2		
12	H0076	Grip Link Bush	Aluminum	3		
13	H0078	Washers	Ø3.1 x Ø 12 x 1.8mm	2		
14	H0082	Boom spacers	Aluminum	2		
15	H0155	Tail Pulley	25t	1		
16	H0264	Tail Pin		2		
17	H0327	Tail Blade Grip		3		
18	H0349	Washer	Ø7.5x Ø10x0.5mm	3		
19	H0358	Block Nut		1		
20	H0394	Carbon Road Support		1		
21	H0395	Carbon Road Support B		1		
22	H0406	Bell Crank Lever	Aluminum	1		
23	H0407	Tail Pitch Slider 02	Black Derlin	1		
24	H0409	Tail Pitch Slider 01	Aluminum	1		
25	H0418	Tail Rotor Hub		1		
26	H0419	Tail Rotor Shaft	<u> </u>	1		
27	H0435	Bushing	Brass	3		

	TAIL SYSTEM				
POS	COD	Name	Specification	Quantity	
28	H0494	Carbon Tail Side Plate	Carbon Fiber	2	
29	H0627	Tail Boom		1	
30	HC004	Socket Head Cap Screws	M2 x 6mm	8	
31	HC020	Socket Head Cap Screws	M2.5 x 8mm	3	
32	HC026	Socket Head Cap Screws	M2.5 x 12mm	5	
33	HC050	Socket Head Cap Screws	M3 x 8mm	9	
34	HC062	Socket Head Cap Screws	M3 x 12mm	6	
35	HC079	Socket Head Cap Shoudered	M3 x 18mm	3	
36	HC086	Socket Head Cap Screws	M3 x 22mm	1	
37	HC134	Flat Head Cap Screws	M3x8mm	1	
38	HC150	Set Screws	M3 x 20mm	1	
39	HC153	Set Screws	M4 x 6mm	1	
40	HC165	Nylon Screw	M8x20mm	2	
41	HC176	Washer		1	
42	HC191	Washer		3	
43	HC206	Metric Hex Nylon Nuts	M3	7	
44	HC242	Threaded Rods	M2.5 x 40mm	2	
45	HC325	Belt Gates		1	
46	HC402	Flanged Bearings	Ø3 x Ø7 x 3mm	2	
47	HC411	Bearings	Ø5x Ø 10x4mm	6	
48	HC414	Flanged Bearings	Ø6 x Ø 13 x 5mm	2	
49	HC418	Flanged Bearings	Ø8 x Ø 12 x 3.5mm	2	
50	HC435	Thrust Bearings	Ø5x Ø 10x4mm	3	
51	HC449	Washer		3	
52	HC451	Carbon Rod		1	
53	HA015	Double-sided Tapes		2	



#### **Battery Tray** Finishing Washer M3 **Canopy Positioner** Main Structure Frame Spacer [H0002-S] [H0003-S] [H0007-S] [H0008-S] [H0009-S] - 1 x CF Battery Tray. - 6 x Flat Head Cap Screws M2.5x5mm. - 3 x Frame Spacers. - 10 x Finishing Washers . - 2 x Canopy Positioner. - 1 x Main Structure. Servo Support Column **Bearing Support Canopy Knobs** Safety Lock Tail Boom [H0010-S] [H0018-S] [H0024-S] [H0036-S] [H0038-S] - 1 x Bearing Support. - 1 x Bearing 1 x Safety Lock Tail Boom.1 x Finishing Washer M3. $\emptyset$ 12x $\emptyset$ 24x6mm. - 3 x Flat Head Cap Screws - 1 x Socket Head Cap Screws M3x8mm. - 1 x Servo Support. - 4 x Columns. M2.5x5mm. - 2 x Canopy Knobs. Antenna Guide **Locking Element Tail** Spacer Flybarless **Bell Crank Base** [H0041-S] [H0043-S] [H0050-S] [H0058-S] 2 - 3 x Spacer Flybarless. - 1 x Supporto Flybarless. - 1 x Flat Head Cap Screws - 2 x Locking Element Tails. M3x8mm. - 2 x Antenna Guide. - 4 x Metric Hex Nylon Nuts M3. - 5 x Socket Head Cap Screws - 2 x Button Head Cap Screws - 2 x Double Sided Tapes. M3x6mm. M3x4mm. - 1 x Bell Crank Base. **Tail Case Spacer** Uniball M3x4 Ø 5H18 Uniball M2 Ø 5H6 Uniball M3x4 Ø 5H3 [H0061-S] [H0063-S] [H0064-S] [H0065-S] - 5 x Uniballs M2 $\emptyset$ 5H6. - 5 x Uniball Spacers. - 5 x Socket Head Cap Screws M2x8mm. - 2 x Tail Case Spacers. - 4 x Socket Head Cap - 5 x Socket Head Cap Screws Screws M3x8mm. - 1 x Uniball M3x4 Ø 5H18. M2x6mm - 5 x Uniballs M3x4 ∅ 5H3.5. **Plastic Ball Link** Servo Spacer Washer $\emptyset$ 3.1x $\emptyset$ 12x1.8mm **Boom Spacer** [H0066-S] [H0075-S] [H0078-S] [H0082-S] - 10 x Washers - 2 x Boom Spacer.

 $\emptyset$  3.1x  $\emptyset$  12x1.8mm.

- 1 x Set Screw M3x20mm.

Page 35

SAB HELI DIVISION

- 10 x Servo Spacers.

- 10 x Plastic Ball Link.



#### **Bush One Way** [H0110-S]



#### M4 Locking Collar [H0121-S]



- 1 x M4 Locking Collar.
- 1 x Socket Head Cap Screw M4x22mm.
- x Metric Hex Nylon Nut M4.

#### Main Shaft [H0127-S]



- 1 x Main Shaft.
- 1 x M4 Locking Collar.
- 1 x Socket Head Cap Screw Shouldered M4x24mm.
- 2 x Socket Head Cap Screws M4x22mm.
- x Metric Hex Nylon Nuts M4

#### **Radius Arm** [H0132-S]



- -2 x Radius Arms.
- -2 x Spacer Arm ∅ 3x ∅ 5x2.7mm.
- -2 x Spacer Arm ∅ 2.5x ∅ 4x6.3mm.
- -2 x Uniball Radius Arms.
- -2 x Socket Head Cap Screws M3x16mm.
- -2 x Socket Head Cap Screws M2.5x18mm.
- -2 x Washers Ø 3x Ø 4x0.5mm.
- -2 x Flanged Bearings Ø 2.5x Ø 6x2.5mm. -2 x Flanged Bearings Ø 3x Ø 7x3mm.

### **Motor Mount** [H0142-S]

- 4 x Bush One Ways.



- 1 x Bearing 3° Support.
- 1 x Motor Support.
- 1 x Flanged Bearing  $\emptyset$  6x  $\emptyset$  13x5mm.
- 2 x Socket Head Cap Screws M3x8mm.
- 2 x Set Screws M5x20mm.
- 2 x Washers  $\emptyset$  5.3x  $\emptyset$  15x1mm.
- 2 x Metric Hex Nylon Nuts M5H4.8.
- 2 x Finishing Washers M3.
- 2 x Socket Head Cap Screws M3x10mm.
- 2 x Metric Hex Nylon Nut M3 H4.
- 2 x Springs de 5.8/ df0.5 / LL9.
- 2 x Springs de 3/ df0.5 / LL12.

#### **Bearing Support** [H0143-S]



- 1 x Bearing 3° Support.
- 1 x Flanged Bearing  $\emptyset$  6x  $\emptyset$  13x5mm.
- 2 x Socket Head Cap Screws M3x8mm.



- 1 x Battery Plate.
- 1 x Battery Protection.
- 2 x Cylinder M2.5.
- 2 x Flat Head Cap Screw M2.5x5mm.
- 1 x Heat Shrink.

#### **Stop Battery Tray** [H0150-S]



Swashplate Anti-Rotation Guide [H0152-S]



- 1 x CF Swashplate Anti-Rotation Guide.
- 1 x Finishing Washer M3.
- 1 x Socket Head Cap Screw M3x8mm.

## Carbon Fiber ESC Support (H0153-S)



- 1 x ESC Support.
- 6 x Flat Head Socket Cap M2,5x5mm

#### 24T Tail Pulley [H0154-S]



- 1 x 24T Tail Pulley.
- 1 x Set Screw M4x4mm.
- 6 x Socket Head Cap Screws M2x5mm.

## 25T Tail Pulley [H0155-S]



- 1 x 25T Tail Pulley.
- 1 x Set Screw M4x4mm.
- 6 x Socket Head Cap Screws M2x5mm.

## **Steel Pinion Z19** [H0156-S]

- 1 x Stop Battery Tray.

Screws M2.5x8mm.

- 2 x Socket Head Cap



- 1 x Steel Pinion Z19.
- 1 x Socket Head Cap M3x22 Shoulder.
- 1 x Metric hex locknut Nuts M3H4.

## Secondary Shaft [H0157-S]



- 1 x Secondary Shaft M3.
- 1 x Head Cap Shouldered M2.5x19mm.
- 1 x Metric Nylon Nut M2,5
- 1 x Head Cap Shouldered M3x22mm.
- 1 x Metric Nylon Nuts M3

## **Aluminum Blade Spacer** [H0158-S]



- 4 x Aluminum Blade Spacer.

## One Way Pulley [H0104-S]



- 2 x Brass Bushing.
- 2 x Radial Bearings  $\emptyset$  10x  $\emptyset$  15x4mm.
- 1 x One Way Bearing  $\emptyset$  10x  $\emptyset$  14x12mm.
- 1 x Aluminum Pulley 60T.

## **Front Tail Pulley** [H0101-S]



- 1 x Front Tail Pulley.
- 1 x Socket Head M2.5x19mm.
- 1 x Metric Nylon Nuts M2,5.

#### **Belt Tensioner Support** [H0070-S]

- 1 x Column Belt Tensioner.
- 1 x Tail Belt Idler.
- 1 x Belt Tensioner Arm.
- 2 x Flanged Bearings  $\emptyset$  3x  $\emptyset$  7x3mm. 2 x Flanged Bearings  $\emptyset$  5x  $\emptyset$  9x3mm.
- 1 x Socket Head Cap Screw M3x50mm.
- 1 x Washer Ø 3x Ø 4x0.5mm.
- 1 x Socket Head Cap Screw M3x12mm.
- 2 x Washers  $\emptyset$  3.2x  $\emptyset$  6x0.5mm. - 1 x Button Head Cap Screw M3x4mm.
- 1 x Spring De8/df0.5/LL8.





- 1 x 18T Pulley.

- 2 x Set Screws M4x4mm.

#### 19T Pulley [H0126-19-S]



- 1 x 19T Pulley.

- 2 x Set Screws M4x4mm.

Page 36



### 20T Pulley [H0126-20-S]



- 1 x 20T Pulley. - 2 x Set Screws M4x4mm. 21T Pulley [H0126-21-S]



- 1 x 21T Pulley. - 2 x Set Screws M4x4mm. 22T Pulley [H0126-22-S]



- 1 x 22T Pulley. - 2 x Set Screws M4x4mm. 23T Pulley [H0126-23-S]



- 1 x 23T Pulley.

- 2 x Set Screws M4x4mm.

## 24T Pulley [H0126-24-S]



- 1 x 24T Pulley. - 2 x Set Screws M4x4mm. Blade Grip [H0182-S]



- 2 x Thrust Bearing Ø 10x Ø 18x5.5mm. 4 x Bearing Ø 10x Ø 19x5mm. 2 x Washer Ø 10x Ø 16x1mm.

- 2 x Button Head Socket Cap M4x10mm.

## **Blade Grip Arm** [H0464-S]



- 2 x Blade Grip Arm.
- 2 x Socket Head Cap Screw M4x10mm.
- 2 x Uniball M3x4 Ø5 H3.5.

## **Plastic Tail Linkage** [H0261-S]



- 1 x Plastic Tail Linkage.
- 1 x Grip Link Bushing.
- 1 x Socket Head Cap Screws M2x6mm.

### Steel Tail Shaft [H0325-S]



- 1 x Steel Tail Shaft Assembly.
- 1 x Tail Oring Damperner. Spacer Set For Tail Rotor

## **Aluminum Tail Blade Grip** [H0327-S]



- 2 x Aluminum Tail Blade Grip.
- 4 x Bearing Ø5xØ10x4mm.
- 2 x Thrust bearing Ø5xØ10x4mm.
- 2 x Button Head Cap M4x8mm. - 2 x Socket Head Cap M2x6mm.
- 2 x Washer Ø5xØ8.9x0,75mm.
- 2 x Washer Ø7.5xØ10x0,5mm.

## **Tail Spilde Shaft** [H0329-S]



- 1 x Tail Spilde Shaft. - 2 x Button Head Cap

Screws M4x6mm.

[H0330-S]



- 2 x Washer Ø5xØ8.9x0,75mm.
- 2 x Washer Ø7.5xØ10x0,5mm.
- 2 x Tail Oring Damperner.

## **Plastic Lading Gear**



- 1 x Plastic Landing Gear
- 2 x Landing Gear Plastic Support.
- 4 x Finishing Washer.
- 4 x Head Cap Screw M3x10mm.

#### **Tail Boom Support** [H0358-S]



- 1 x Tail Boom Support.
- 1 x Nylon screw M8x20mm.
- 1 x Flat Head Cap ScrewsM3x8mm.

Page 37

## **Ball Link** [H0402-S]

- 5 x Ball Link



**Bell Crank Lever** [H0406-S]

- 2 x Tail Pin. - 1 x Uniball M2.
- 1 x Uniball Spacer.
- 1 x Bell Crank Lever. - 2 x Flanged Bearing Ø 3x Ø 7x3mm.
- 1 x Head Cap Screws M3x22mm.
- 1 x Head Cap Screws M2x8mm.
- 1 x Washer  $\emptyset$  3x  $\emptyset$  4x0.5mm.
- 1 x Spacer 3 x 4 x 9.6mm.

- 1 x Tail Pitch Slider 01 - 1 x Tail Pitch Slider 02

- 1 x Tail Pitch Slider 03. 1 x Spacer Ø8x Ø9x3.2mm.

Tail Pitch Slider 3 Blade

- 2 x Flanged Bearings Ø 8x Ø 12x3.5mm







- 1 x Center Hub.
- 1 x Socket Head Cap Screws M3x12mm.
- 1 x Socket Head Cap Screw Shouldered M4x25mm.
- 1 x Metric Hex Nylon Nut M4.





- 1 x Tail Shaft.
- 2 x Set Screws M4x6mm.

Spindle Shaft [H0412-S]

- 2 x Spindle Shaft.
- 2 x Pin 5mm.
- 4 x Socket Head Cap
- Screw M2.5x6mm. x Socket Head Cap
- Screw M4x10mm x Washer Ø6,3 x Ø15 x 1mm

Main Linkage [H0417-S]



- 2 x Linkage Rod M3x50mm.
- 4 x Plastic ball linkages.



- 1 x Tail Hub.
- 1 x Set Screw M4x6mm.
- 3 x Head Cap Screws M3x8mm.
- 3 x Washer Ø3xØ7x1mm.
- 3 x Washer Ø5xØ7x0,2mm.



- 1 x Swashplate Assembly.
- 2 x Bearings  $30x \emptyset 37x4mm$ . 6 x Uniballs  $M3x4 \emptyset 5 H3$ .
- 1 x Uniball M3x4 Ø 5 H18.
- 3 x Head Cap Screws M2x5mm.
- 3 x Swasher  $\bigcirc$  2x  $\bigcirc$  5x0.5mm

Radius Arm [H0421-S]

- 2 x Radius Arms. 2 x Spacer Arm Ø 3x Ø 5x2.7mm.
- 1 x Spacer Hex.
- 1 x Uniball Radius Arms.
- 2 x Head Cap Screws M3x16mm.
- 2 x Head Cap Screws M2.5x10mm.
- 2 x Flanged Bearings  $\emptyset$  2.5x  $\emptyset$  6x2.5. 4 x Flanged Bearings  $\emptyset$  3x  $\emptyset$  7x3mm.



- 3 x Pin M2.
- 3 x Spacer Ø 2x Ø 3x3mm.
- 3 x Tail Pitch Slider Link.
- 6 x Head Cap Screws M2x6mm.

Uniball M3xH5.5 [H0437-S]



#### Damper [H0486-S)



- 3 x H0486-B.
- 3 x Washers 10x 16x1mm.
- 3 x Washers 10x 16x0.2mm.
- 6 x Orings 3050 90° shore.
- 6 x Orings 3050 60° shore.

**Main Frame** [H0493-S]



- 1 x Main Frame.

**Carbon Tail Side Plate** [H0494-S]



- 2 x CarbonTail Side Plate.
- 2 x Flanged bearing Ø6xØ13x5mm.

- 2 X Uniball M3H5.5. **Tail Servo Support** [H0494-S]



**Tail Servo Support** [H0495-S]



- 1 x Tail Servo Support.

**Landing Gear Support** [H0496-S]



- 2 x Landing Gear Support.

Wire Support [H0497-S]




- 1 x Wire Support.
- 1 x Spacer Wire 11mm.
- 1 x Spacer Wire 9mm.
- 2 x Head Cap Shoulder M3x18mm.

Red Canopy / Tail Boom [H0627-S] 00

- 1 x White/Red Canopy.

- 2 x Tail Servo Support.

- 2 x Canopy Grommet.
- 1 x Canopy mousse.
- 1 x Canopy Edge Protection.

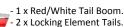

- 2 x Double-Sided Tapes.
- 1 x Set Screws M3 x 20mm.
- 2 x Boom spacers.
- 2 x Head Cap Screws M3 x 12mm.
- 2 x Washers 3.1 x 12 x 1.8mm.
- 4 x Metric Hex Nylon Nuts M3.
- 2 x Nylon Screw M8x20mm.
- 1 x Flat Head Cap Screws M3x8mm.

White Canopy / Tail Boom [H0630-S]



- 1 x White Canopy.
- 2 x Canopy Grommet.
- 1 x Canopy mousse.
- 1 x Canopy Edge Protection.




- 1 x White Tail Boom.

- 2 x Locking Element Tails.
- 2 x Double-Sided Tapes.
- 1 x Set Screws M3 x 20mm.
- 4 x Metric Hex Nylon Nuts M3.
- 2 x Boom spacers.
- 2 x Head Cap Screws M3 x 12mm.
- 2 x Nylon Screw M8x20mm.
- 1 x Flat Head Cap Screws M3x8mm.

Page 38



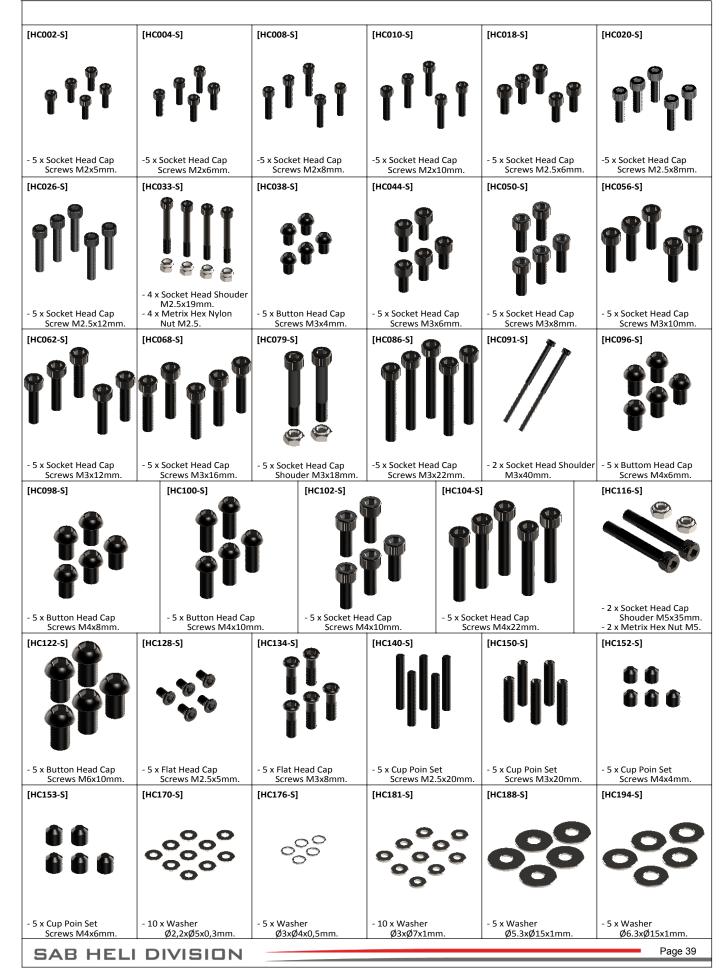







## **UPGRADES and ACCESSORIES**

SAB HELIDIVISION Futaba Servo Horn [HA050]



- 1 x Plastic Servo Horn.

SAB HELIDIVISION
JR Servo Horn
[HA050]

- 4 x JR Servo Horn.

SAB HELI DIVISION New Black T-shirt [HM025-S-M-L-XL-XXL]



- SAB HELI DIVISION New Black T-shirt.

SAB HELI DIVISION Black Polo Shirt [HM027-S-M-L-XL-XXL]



- SAB HELI DIVISION Black Polo Shirt.

SAB HELI DIVISION Black Hoodies [HM029-S-M-L-XL-XXL]



- SAB HELI DIVISION Black Hoodies.

SAB HELI DIVISION Neck Strap [HM034]



- 1 x Neck Strap.

SAB HELI DIVISION Decal [HM042 - HM043]



- 1 x SAB HELI DIVISION Decal ( set ).

SAB HELI DIVISION Stand [HM038]



- 1 x SAB HELI DIVISION Stand ( Set ).

SAB HELI DIVISION Bags [HM047]



- 1 x SAB HELI DIVISION Bags.

The "Urukay Competion" was made to deliver an even more performing and elegant flying style.

The Goblin SAB Helidivision aims at the best: the new fuselage embodies a never seen elegance which allows you to perform excellent geometric figures up in the sky leaving everyone speechless.

Discover the new visionary and innovative design, which I have chosen to compete at the last 93C World Championship 2015.

Ennio Graber

F3C WORLD CHAMPION







WWW.GOBLIN-HELICOPTER.COM WWW.SABITALY.IT